


**RENAULT MEGANE 2 Cabrio (CC Coupe) 09/03 >>**

<b>D</b>	<b>Einbauanleitung</b> <b>Elektro-Einbausatz für Anhängerkupplung,</b> <b>7-polig, 12 Volt, nach ISO 1724</b>
<b>GB</b>	<b>Installation Instructions</b> <b>Electric Kit for Trailer Coupling,</b> <b>7 Channel, 12 Volt, According to ISO 1724</b>
<b>F</b>	<b>Notice de montage</b> <b>Kit électrique pour attelage de remorque,</b> <b>7 broches, 12 Volt, selon ISO 1724</b>



# KIT

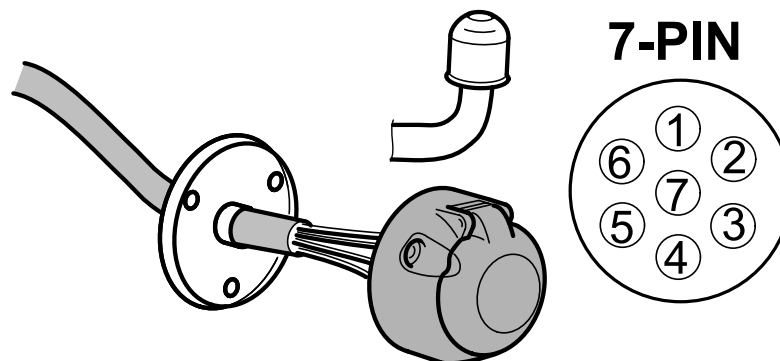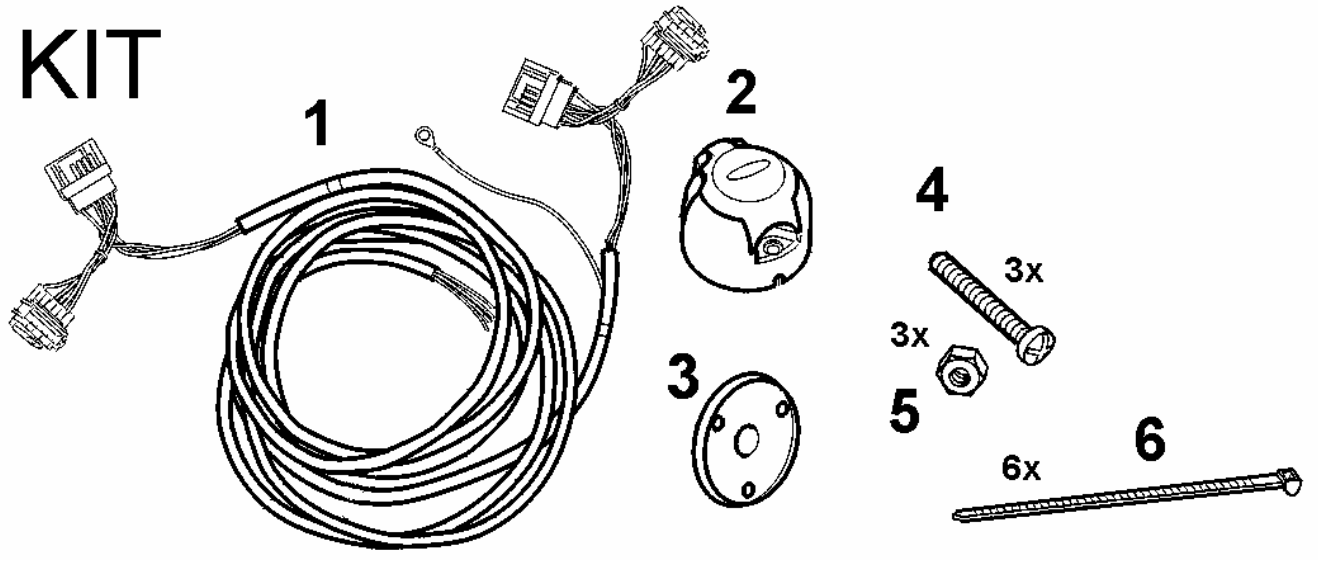

# Tools


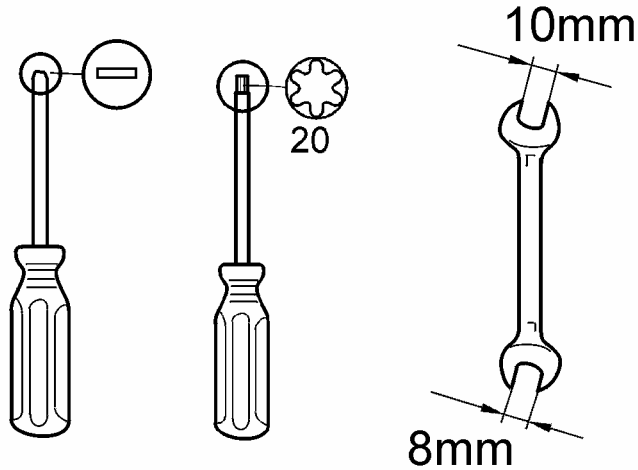


1

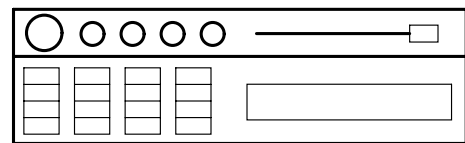
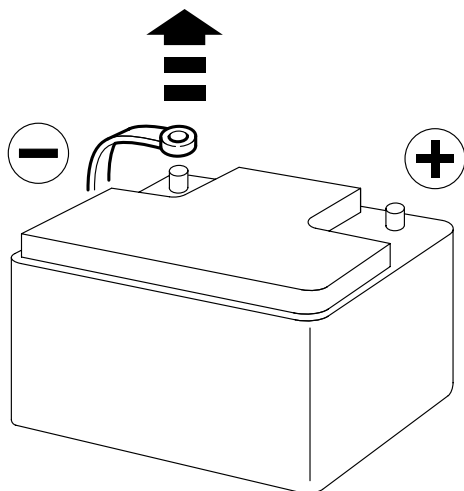


Radio Code


2

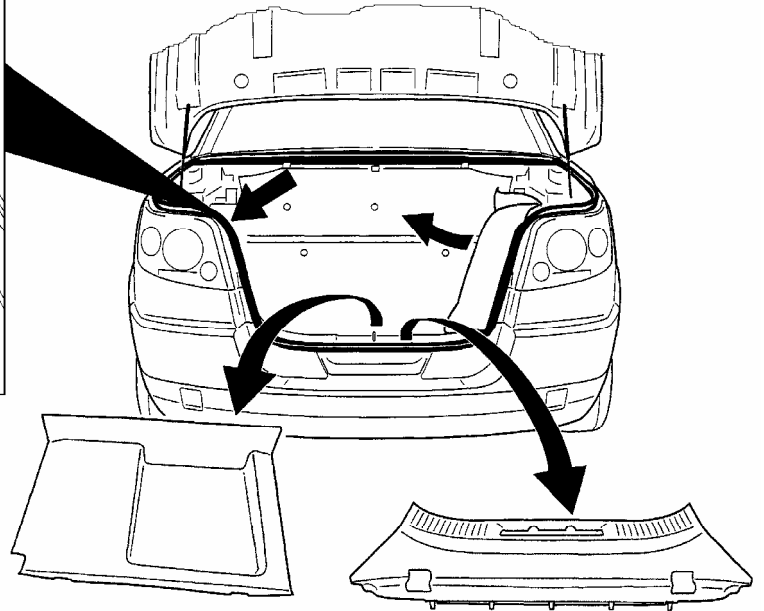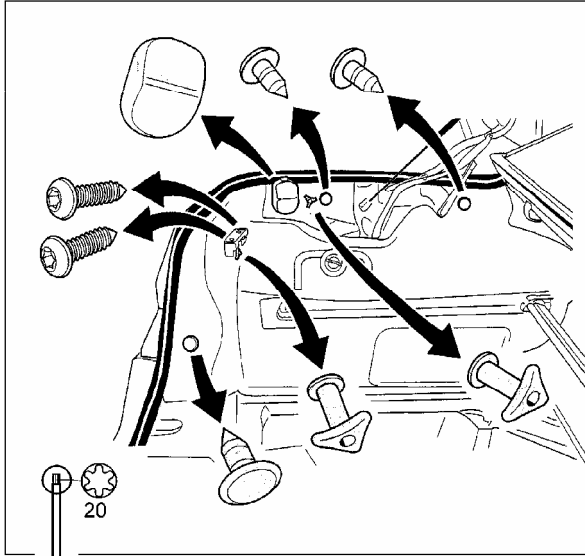


3

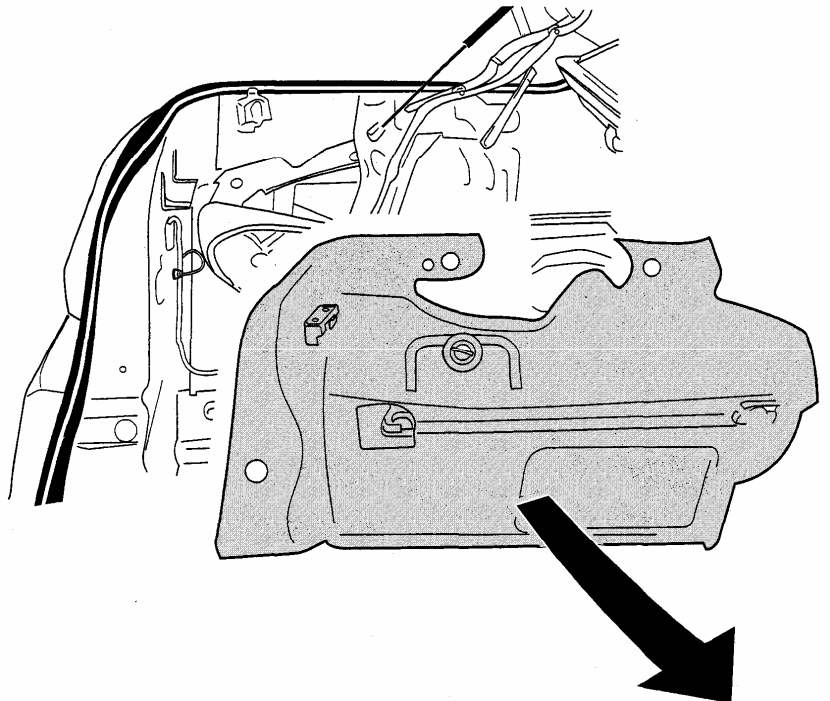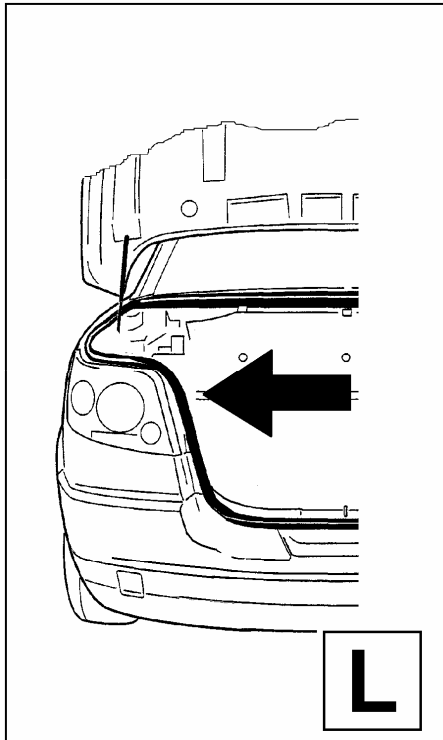


4

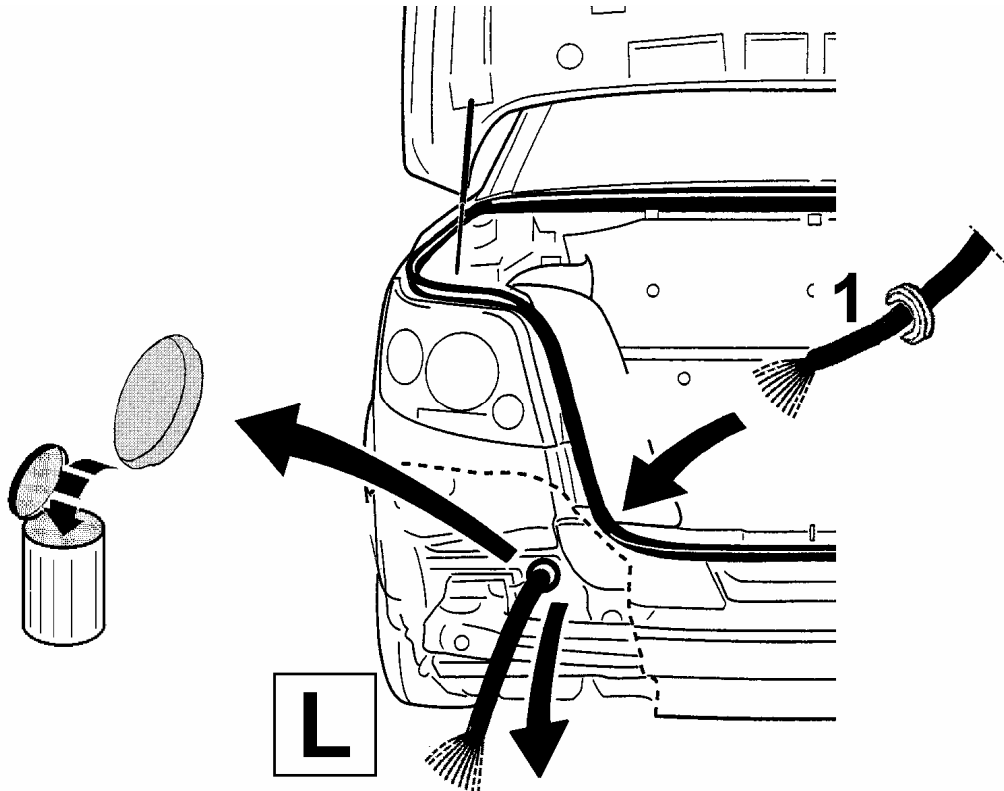

5


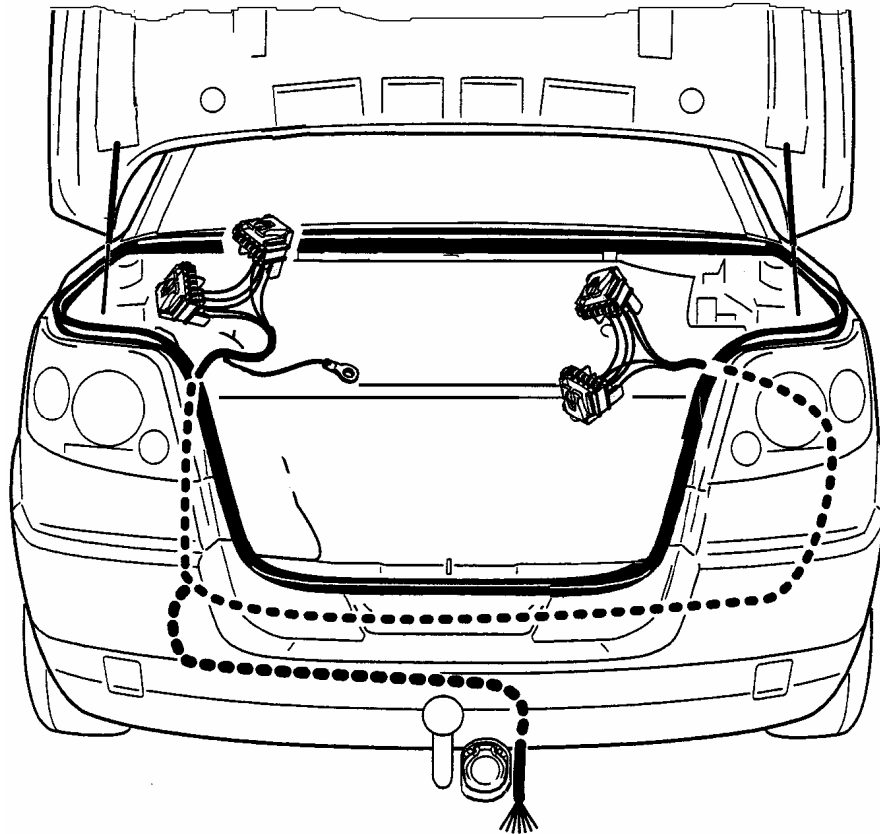



6

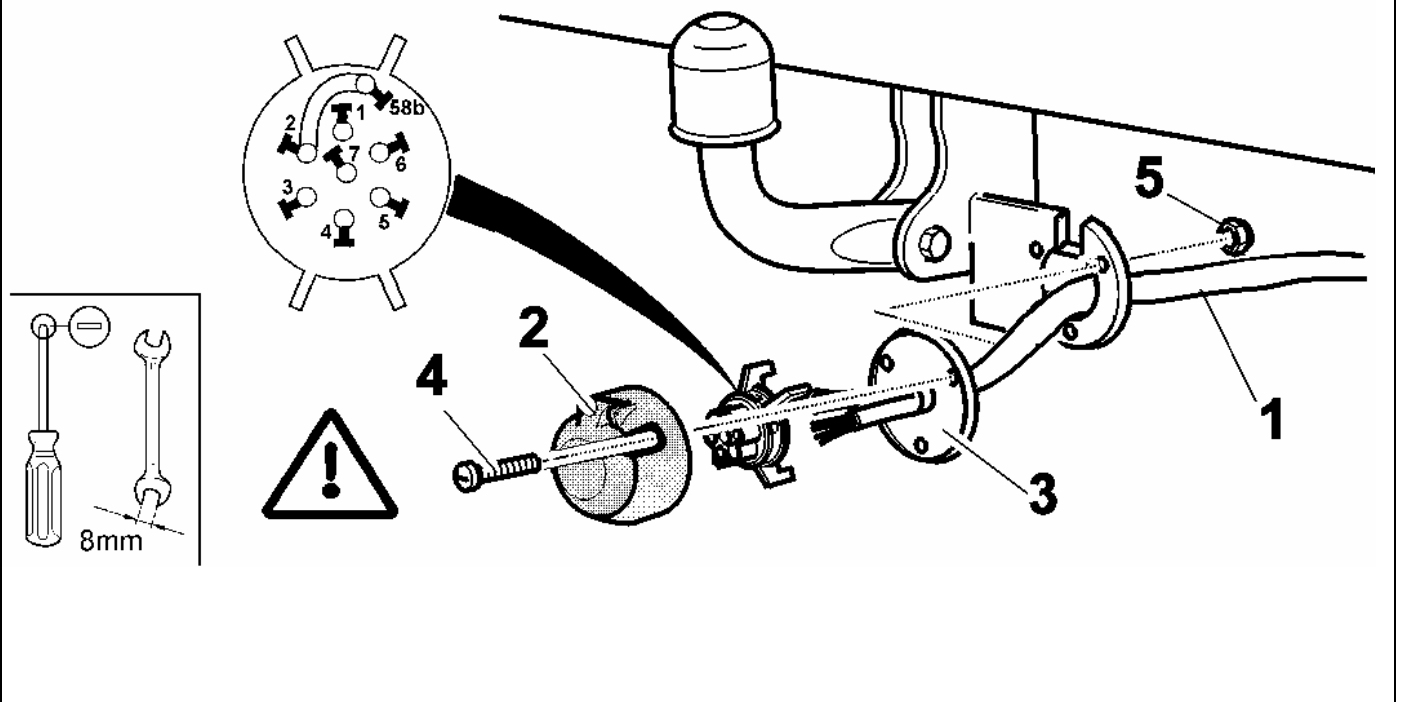

7

Kontakt-Nr. Contact no. N° du contact	<b>D</b>	<b>GB</b>	<b>F</b>	
<b>1/L</b>	schwarz/weiß	black/white	noir/blanc	
<b>2/54g</b>	grau	grey	gris	
<b>3/31</b>	schwarz	black	noir	
<b>4/R</b>	schwarz/grün	black/green	noir/vert	
<b>5/58R</b>	grau/rot	grey/red	gris/rouge	
<b>6/54</b>	schwarz/rot	black/red	noir/rouge	
<b>7/58L</b>	grau/schwarz	grey/black	gris/noir	
<b>8/58b</b>	grau/weiß	grey/white	gris/blanc	

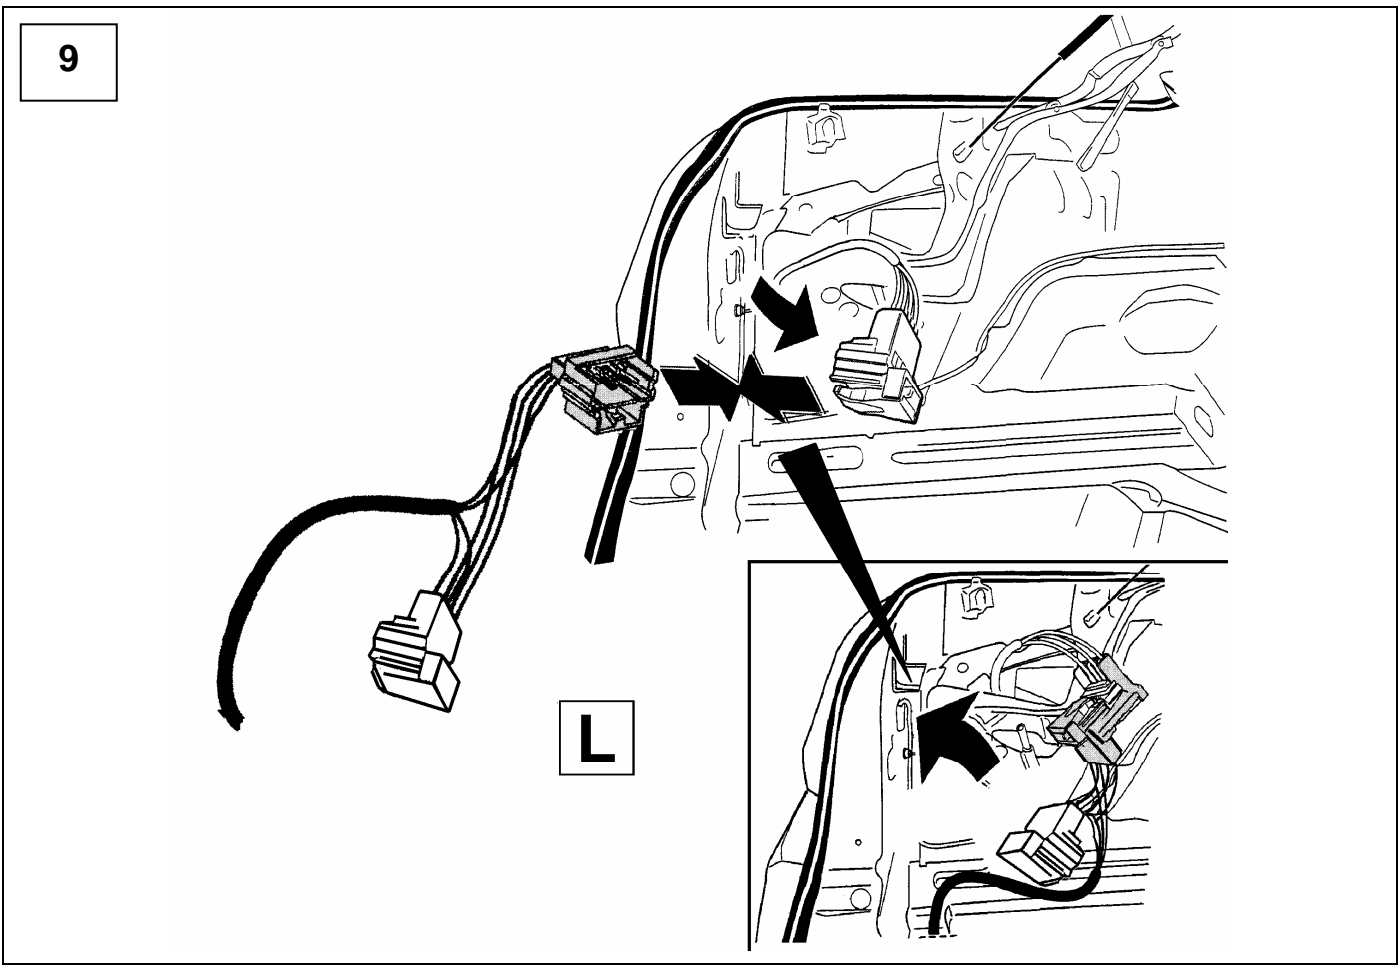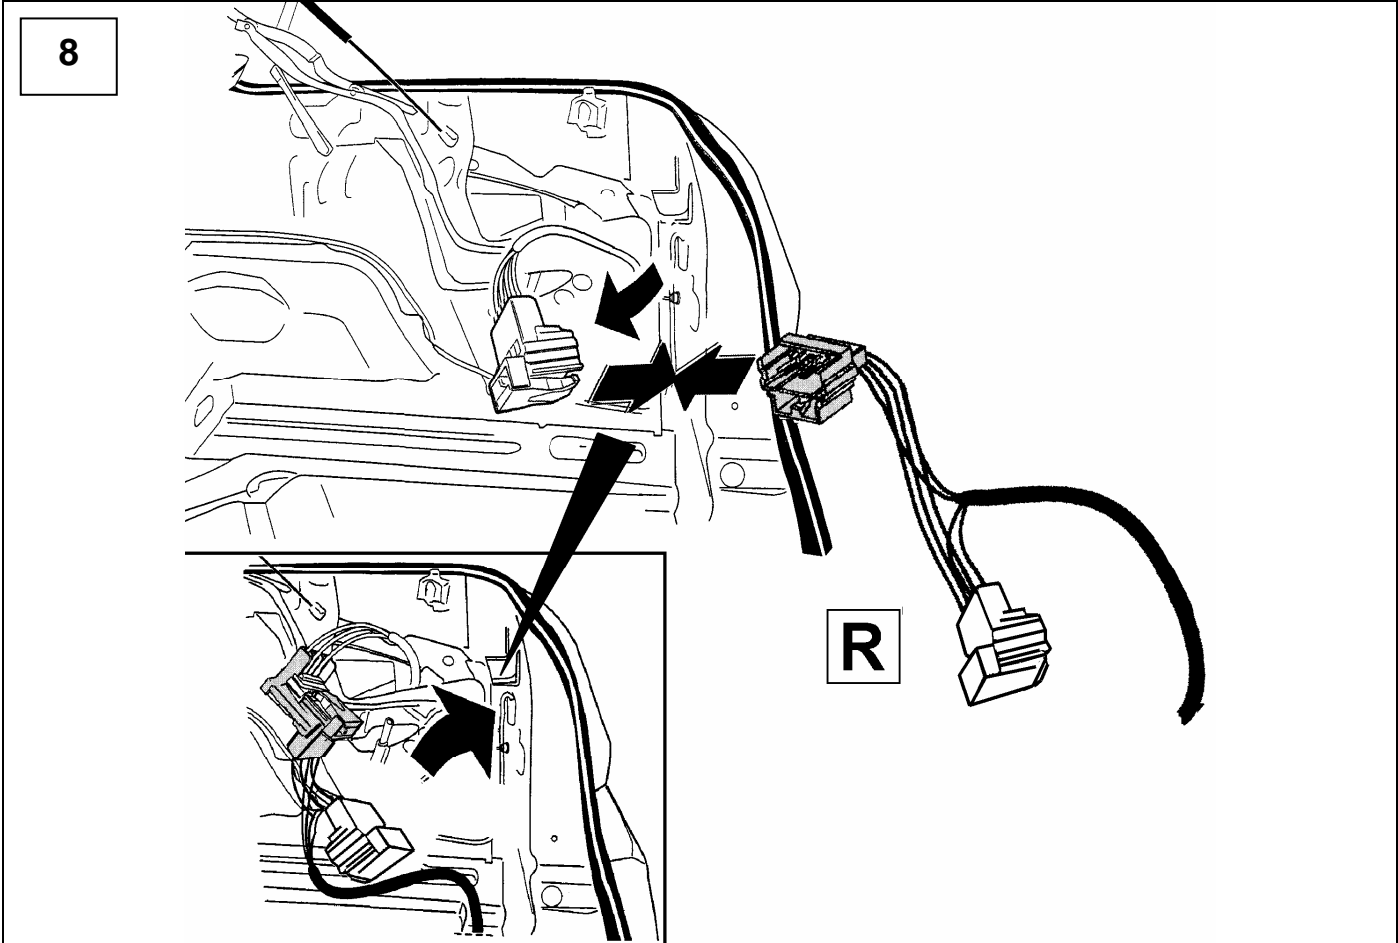

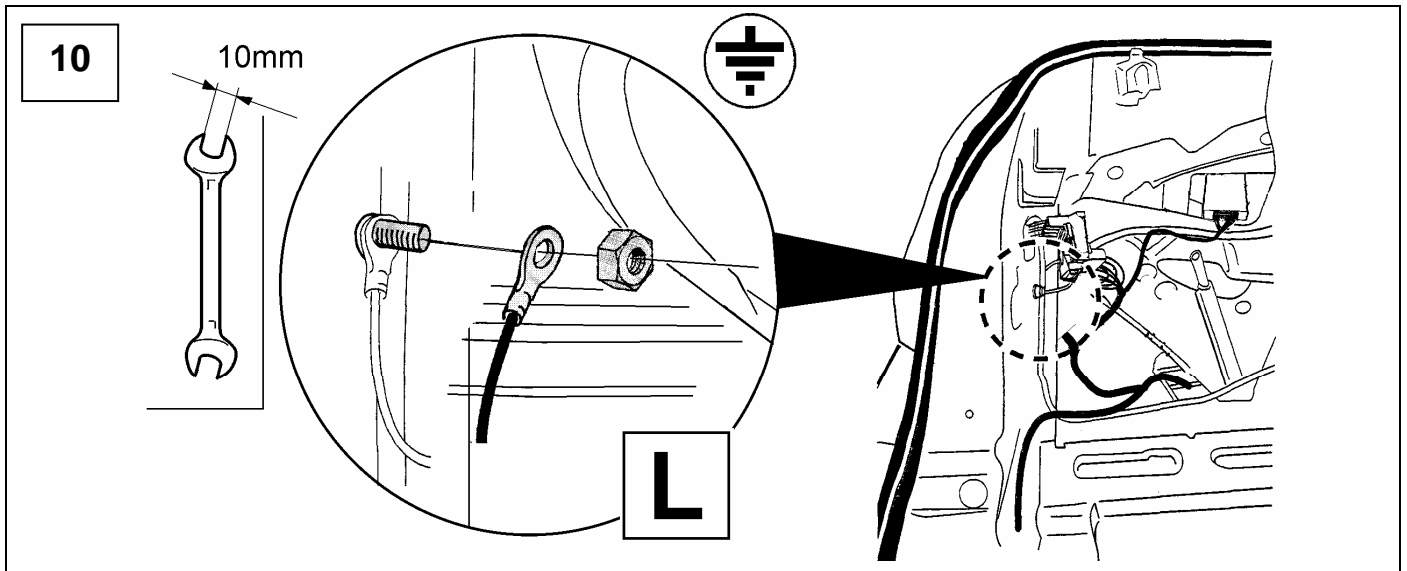


**11**

**D** Alle Verkleidungen und demontierten Teile wieder einbauen.

**GB** Reinstall all the linings and dismantled parts.

**F** Remonter tous les revêtements et pièces.

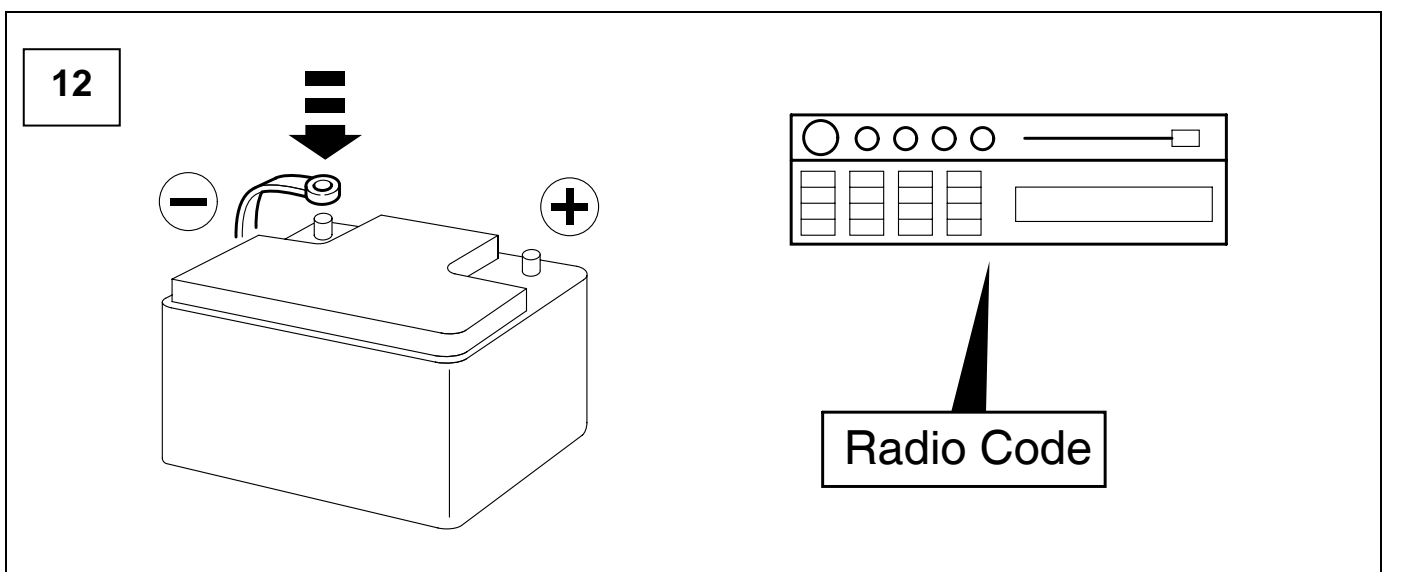

<b>D</b>	Funktionen kontrollieren!
<b>GB</b>	Check functions!
<b>F</b>	Contrôler les fonctions!