



Service Info



Note for repairs to 02T transmissions

Correct procedure for filling the transmission with oil

Manufacturer: Audi, Seat, Skoda, Volkswagen

Models:

Audi: A1, A2, A3
 Seat: Cordoba, Ibiza
 Skoda: Fabia, Rapid, Roomster
 Volkswagen: Bora, Fox, Golf IV, Lupo, New Beetle, Polo

Transmission type: 02T

Part no.: 462 0055 10

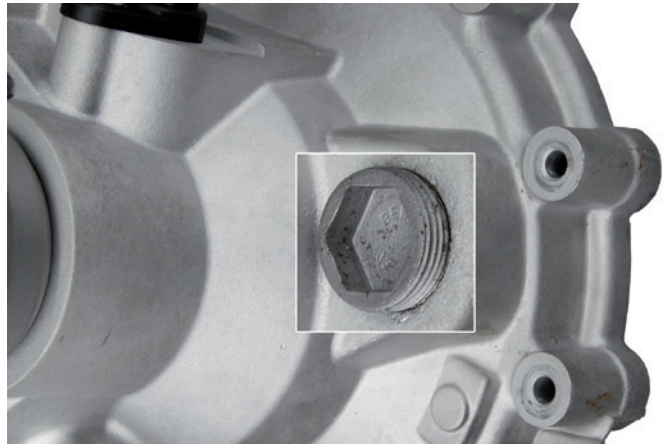


Figure 1: design of an oil filler screw with hexagonal socket

Following installation, the transmission must be filled with the appropriate amount of transmission oil.

To perform this step, proceed as follows:

- Unscrew the oil filler plug (figure 1) out of the transmission
- Fill the transmission with transmission oil up to the lower edge of the filler hole
- Replace the oil filler plug
- Start the engine and shift into a gear (making sure that the wheels of the drive axle are not touching the ground!)
- Let the engine run for approx. 2 minutes with a gear engaged
- Stop the engine and unscrew the oil filler plug
- Once again fill the transmission with transmission oil up to the lower edge of the filler hole
- Replace the oil filler plug and tighten to the prescribed tightening torque*

- * Plug with triple-square socket: 25 Nm
 Plug with hexagonal socket: 30 Nm

Please observe the vehicle manufacturer specifications!

You want more? We can help!

Phone: +44 (0) 1432 264 264*
 Fax: +44 (0) 1432 375 760
 hfd-info@schaeffler.com
 www.schaeffler-aftermarket.co.uk

* Calls from within the UK 08457 001100

