


DONNEES TECHNIQUES

Operating Mode	Hydraulic
for steering manufacturer	TRW
Length [mm]	1220
Mounting	Bride L.50mm Ø43mm
Pinion type	Flat pinion
Pinion length [mm]	40
Inlet fitting	F16x150
Outlet fitting	F18x150
Axle Joint Thread Size	M14x150
	Replacement Silentbloc fixing advised

PHOTOS

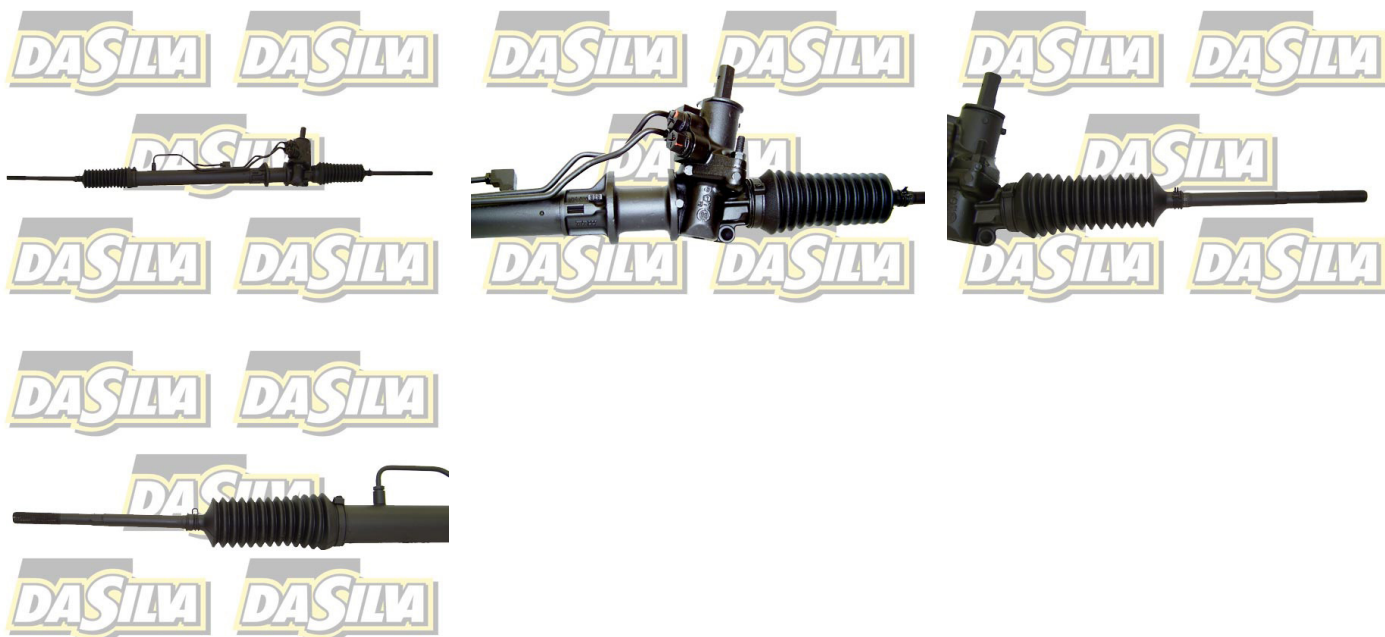


DOCUMENTS

- BT-110 Montage des crémaillères et pompes d'assistance
- BT-132 Refus des carcasses crémaillères et pompes
- BT-174 Rinçage du circuit Hydraulique

APPLICATIONS

RENAULT		
MEGANE (95-02) (BA0/1_) - 1.4 16V (BA0D, BA1H, BA0W, BA10)	95 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 1.4 e (BA0E, BA0V)	75 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 1.6	87 ch	02.2000 > 09.2000
MEGANE (95-02) (BA0/1_) - 1.6 16V (BA11, BA04, BA0B, BA1J)	107 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 1.8 16V (BA06, BA12, BA1A, BA1M, BA1R)	115 ch	01.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 D Eco (BA0U, SA0U, BA0A)	64 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 1.9 DCi	105 ch	07.1999 > 07.2003
MEGANE (95-02) (BA0/1_) - 1.9 dCi (BA05, BA1F)	102 ch	02.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 dT (BA0K, SA0K, BA0Y, SA0Y)	90 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 1.9 DTi	82 ch	02.2000 > 09.2000
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA08, BA0N)	98 ch	07.1999 > 02.2001
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA1U)	80 ch	02.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 dTi	94 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 2.0 16V (BA0H)	147 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 2.0 i	109 ch	07.1999 >
MEGANE (95-02) (BA0/1_) - 2.0 i (BA0G)	114 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.4 16V (KA0D, KA1H, KA0W, KA10)	95 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.4 e (KA0V)	75 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.6 16V (KA0B, KA04, KA11)	107 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.6 e (KA0F)	90 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.8 16V (KA0S, KA12, KA1A, KA1M, KA1R)	115 ch	01.2001 >
MEGANE (95-02) Break (KA0/1_) - 1.9 D (KA0J, KA0R)	64 ch	07.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dCi (KA05, KA1F)	102 ch	02.2001 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dTi (KA0N)	98 ch	07.1999 > 02.2001
MEGANE (95-02) Break (KA0/1_) - 1.9 dTi (KA1U)	80 ch	02.2001 >
MEGANE (95-02) Cabriolet (EA0/1_) - 1.4 16V (EA0D, EA1H, EA0W, EA10)	95 ch	07.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 1.6 16V (EA0B, EA04, EA11)	107 ch	07.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 (EA0G)	114 ch	07.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V	139 ch	01.2002 >
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V (EA0H)	147 ch	07.1999 > 11.1999
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V IDE (EA03, EA0P, EA14)	140 ch	11.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 i (EA0G)	109 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.4 (LA0E, LA0V)	75 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.4 16V (LA0D, LA1H, LA0W, LA10)	95 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.6 16V (LA04, LA11, LA0B, LA1C, LA1J)	107 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.6 e (LA0F, LA0S)	90 ch	09.1996 > 03.1999
MEGANE (95-02) Classic (LA0/1_) - 1.8 16V (LA06, LA12, LA1A, LA1M, LA1R)	115 ch	01.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 D (LA0A, LA0U)	64 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dCi (LA05, LA1F)	102 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dT (LA0K, LA0Y)	90 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA08, LA0N)	98 ch	07.1999 > 02.2001
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA1U)	80 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi	94 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 2.0 i	109 ch	07.1999 >
MEGANE (95-02) Classic (LA0/1_) - 2.0 i (LA07, LA0G)	114 ch	07.1999 >
MEGANE (95-03) Coupé (DA0/1_) - 1.4 16V (DA0D, DA1H, DA0W, DA10)	95 ch	07.1999 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 1.6 16V (DA0B, DA04, DA11)	107 ch	07.1999 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 1.9 DCi	105 ch	07.1999 > 09.2000

RENAULT		
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dCi (DA05, DA1F)	102 ch	02.2001 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dTi (DA0N)	98 ch	07.1999 > 02.2001
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V	139 ch	01.2002 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V (DA0H)	147 ch	07.1999 > 11.1999
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V IDE (DA03, DA0P, DA14)	140 ch	11.1999 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 2.0 i	109 ch	07.1999 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 2.0 i (DA0G)	114 ch	07.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.4 16V (JA0D, JA1H, Ja0W, JA10)	95 ch	09.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.6	102 ch	03.2001 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.6 16V (JA0B, JA04, JA11)	107 ch	09.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.8 16V (JA12, JA1R, JA1M, JA1A)	115 ch	01.2001 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dCi (JA05, JA1F)	102 ch	11.2000 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA0N)	98 ch	09.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA1U)	80 ch	02.2001 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 2.0 16V (JA1B, JA1D)	139 ch	07.2000 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 2.0 16V IDE	140 ch	09.1999 > 08.2003

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.