


DONNEES TECHNIQUES

Alternator Charge Current [A]	110
Vehicle Main Current	for vehicles with 12V main current
Type de poulie	PVR6
Terminal/Clamp	with revcounter coupling
Clamp	M6 B+
Plug Type ID	PLUG383

PHOTOS

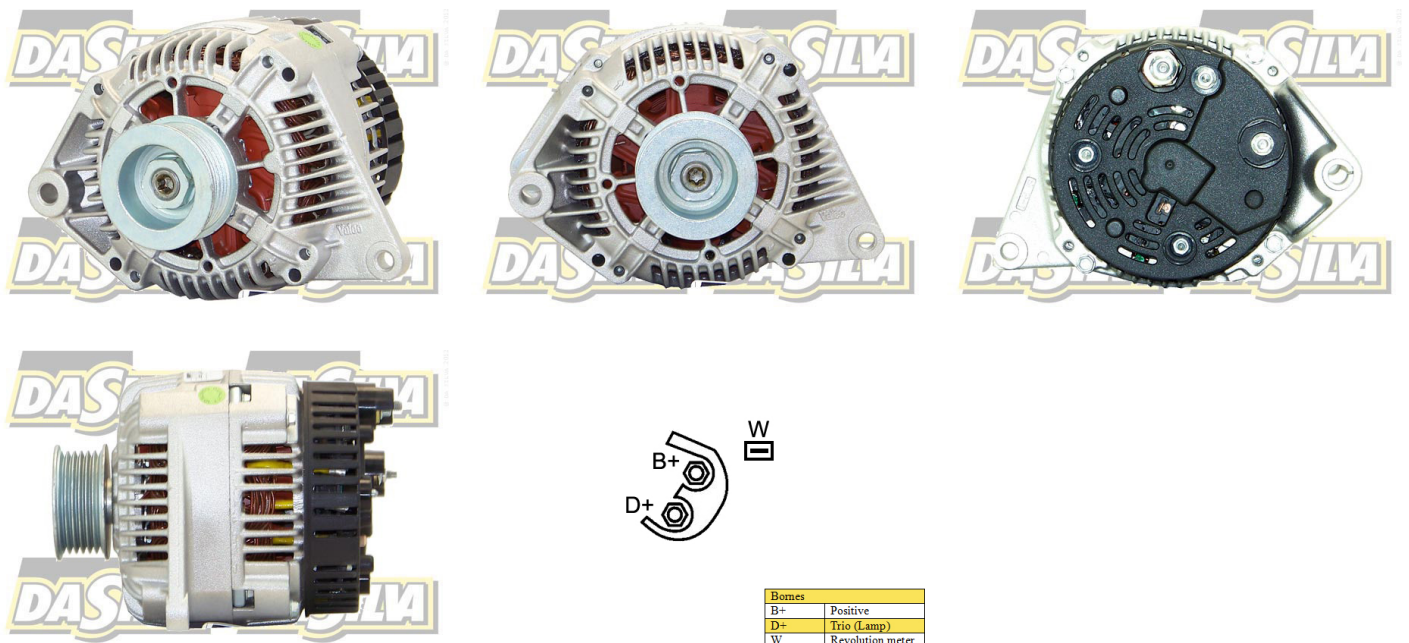


DOCUMENTS

BT-130 Refus des carcasses alternateurs/démarrateurs

APPLICATIONS

RENAULT		
ESPACE (96-02) (JE0_) - 2.2 12V TD (JE0E, JE0H, JE0P)	113 ch	11.1996 > 10.2000
LAGUNA (94-01) (B56_, 556_) - 2.2 D (B56F, B562)	83 ch	11.1993 > 03.2001
LAGUNA (94-01) (B56_, 556_) - 2.2 dT (B569)	113 ch	03.1996 > 03.2001
LAGUNA (95-01) Nevada (K56_) - 2.0 16V (K56D, K56M)	139 ch	09.1995 > 03.2001
LAGUNA (95-01) Nevada (K56_) - 2.2 D (K56F, K562, S56F)	83 ch	09.1995 > 03.2001
LAGUNA (95-01) Nevada (K56_) - 2.2 dT (K569)	113 ch	03.1996 > 03.2001
MEGANE (95-02) (BA0/1_) - 1.9 D Eco (BA0U, SA0U, BA0A)	64 ch	01.1996 >
MEGANE (95-02) (BA0/1_) - 1.9 dT (BA0K, SA0K, BA0Y, SA0Y)	90 ch	01.1996 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 D (LA0A, LA0U)	64 ch	09.1996 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dT (LA0K, LA0Y)	90 ch	09.1996 >
MEGANE (95-03) Scenic (JA0/1_) - 1.9 D (JA0J)	64 ch	03.1997 > 09.1999
SAFRANE (96-00) (B54_) - 2.2 dT (B54G)	113 ch	07.1996 > 12.2000
SKODA		
OCTAVIA (96-10) (1U2) - 1.9 SDI	68 ch	06.1997 >
OCTAVIA (96-10) Combi (1U5) - 1.9 SDI	68 ch	07.1998 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.