
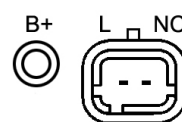
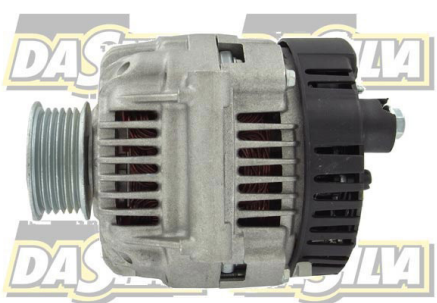


## DONNEES TECHNIQUES

Alternator Charge Current [A]	<b>75</b>
Vehicle Main Current	<b>for vehicles with 12V main current</b>
Type de poulie	<b>PVR6</b>
Clamp	<b>M8 B+</b>
Plug Type ID	<b>PLUG651</b>

## PHOTOS

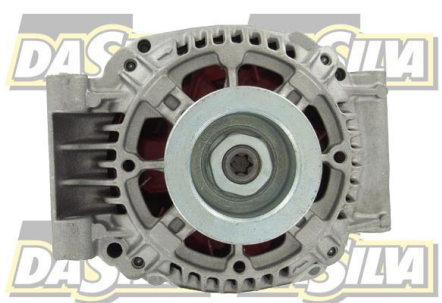

Borne	
B+	Positive
L	Lamp

## DOCUMENTS

**BT-130 Refus des carcasses alternateurs/démarrateurs**

## APPLICATIONS

<b>RENAULT</b>		
CLIO (98-10) (BB__, CB__) - 1.4 16V (BB0L, CB0L)	95 ch	10.1999 > 08.2000
CLIO (98-10) (BB__, CB__) - 1.4 16V (BB0P, CB0P)	98 ch	08.2000 >
CLIO (98-10) (BB__, CB__) - 1.6 16V (CB0T, CB0H)	107 ch	09.1998 >
KANGOO (97-07) (KC0/1_) - 1.4 (KC0C, KC0H, KC0B, KC0M)	75 ch	08.1997 >
KANGOO (97-07) (KC0/1_) - 1.6 16V 4x4 (KC0P, KC0S, KC0L)	95 ch	10.2001 >
KANGOO (97-07) Express (FC0/1_) - 1.4 (FC0C, FC0B, FC0H, FC0M)	75 ch	08.1997 >
LAGUNA (94-01) (B56_, 556_) - 1.6 16V (B568, B561)	107 ch	11.1997 > 03.2001
LAGUNA (95-01) Nevada (K56_) - 1.6 16V (K568)	107 ch	11.1997 > 03.2001
MEGANE (95-02) (BA0/1_) - 1.4 16V (BA0D, BA1H, BA0W, BA10)	95 ch	03.1999 >
MEGANE (95-02) (BA0/1_) - 1.6 16V (BA11, BA04, BA0B, BA1J)	107 ch	03.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.4 16V (KA0D, KA1H, KA0W, KA10)	95 ch	03.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.6 16V (KA0B, KA04, KA11)	107 ch	03.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 1.4 16V (EA0D, EA1H, EA0W, EA10)	95 ch	03.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.4 16V (LA0D, LA1H, IA0W, LA10)	95 ch	03.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.6 16V (La04, LA11, LA0B, LA1C, LA1J)	107 ch	03.1999 >
MEGANE (95-03) Coupé (DA0/1_) - 1.4 16V (DA0D, DA1H, DA0W, DA10)	95 ch	03.1999 > 08.2003

**⚠** Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.