


## DONNEES TECHNIQUES

Alternator Charge Current [A]	<b>87</b>
Vehicle Main Current	<b>for vehicles with 12V main current</b>
Type de poulie	<b>PVR6</b>
Clamp	<b>M8 B+</b>
Plug Type ID	<b>PLUG651</b>

## PHOTOS

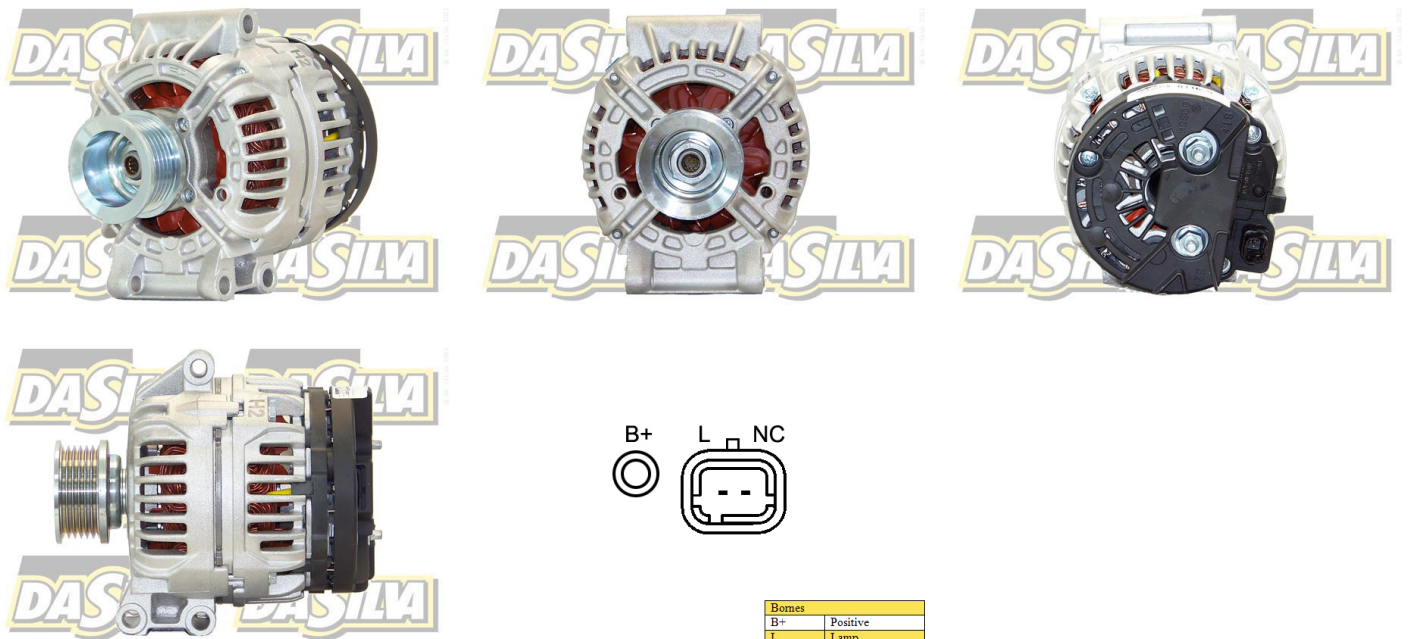


## DOCUMENTS

**BT-130 Refus des carcasses alternateurs/démarrateurs**

## APPLICATIONS

<b>RENAULT</b>		
MEGANE (95-02) (BA0/1_) - 1.6 16V (BA11, BA04, BA0B, BA1J)	107 ch	03.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.6 16V (KA0B, KA04, KA11)	107 ch	03.1999 >
MEGANE (95-02) Cabriolet (EA0/1_) - 1.6 16V (EA0B, EA04, EA11)	107 ch	03.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.6 16V (La04, LA11, LA0B, LA1C, LA1J)	107 ch	03.1999 >
MEGANE (95-03) Coupé (DA0/1_) - 1.6 16V (DA0B, DA04, DA11)	107 ch	03.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.4 16V (JA0D, JA1H, Ja0W, JA10)	95 ch	09.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.6 16V (JA0B, JA04, JA11)	107 ch	09.1999 > 08.2003
THALIA (99-08) (LB0/1/2_) - 1.4	75 ch	08.2000 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.