


DONNEES TECHNIQUES

Length [mm]	648
Number of splines (wheels side)	24
	for vehicles with ABS
(wheels side) shoulder Ø [mm]	49
Position the retaining clip	Gearbox side
ABS ring type	On hub
(wheels side) CV Joint Ø [mm]	72
Number of splines (gearbox side)	23
(gearbox side) CV Joint Ø [mm]	76
(gearbox side) shoulder Ø [mm]	34

PHOTOS

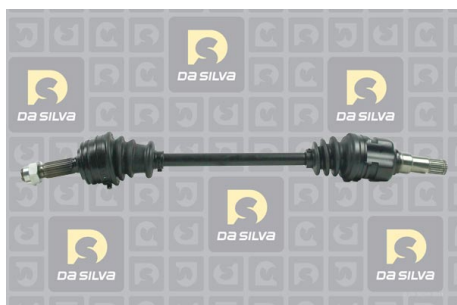

DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions


APPLICATIONS

CITROËN

C1 (PM_, PN_) - 1.0	68 ch	06.2005 >
---------------------	-------	-----------

PEUGEOT

107 - 1.0	68 ch	06.2005 >
-----------	-------	-----------

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.