


DONNEES TECHNIQUES

Length [mm]	865
Number of splines (wheels side)	21
	for vehicles without ABS
(wheels side) CV Joint Ø [mm]	86
Number of splines (gearbox side)	22
(gearbox side) CV Joint Ø [mm]	72

PHOTOS

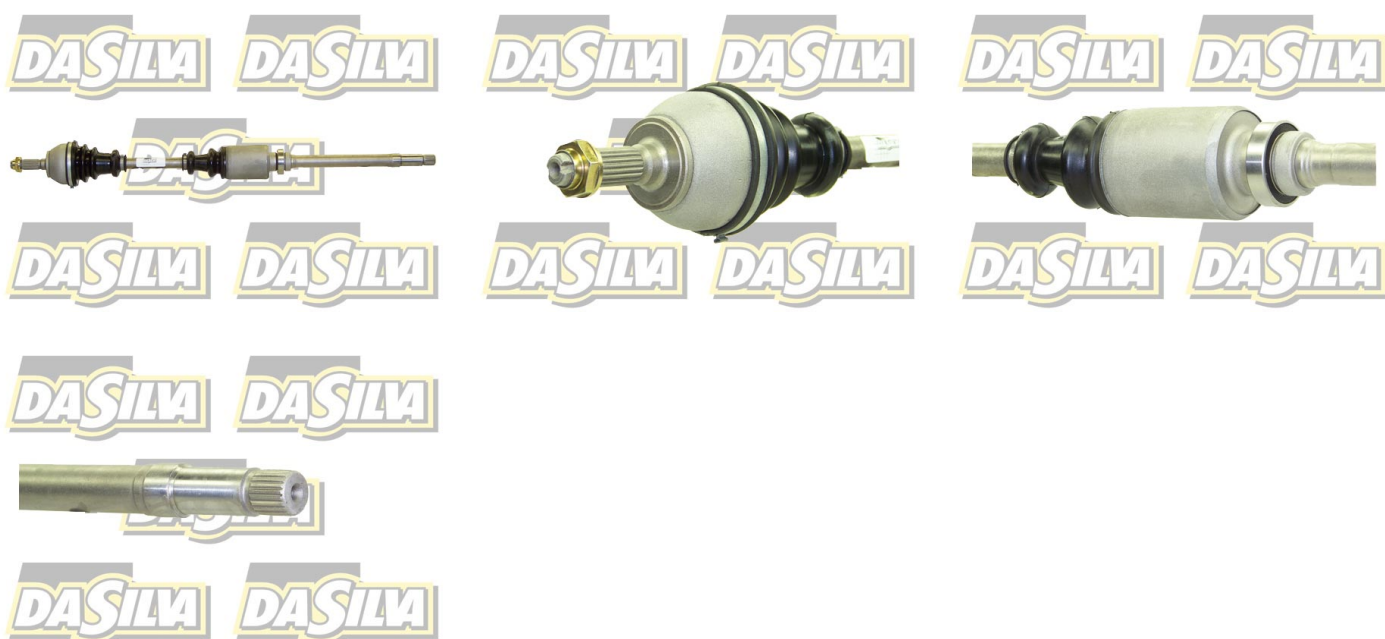


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

CITROËN		
XSARA (N1) - 1.4 i	75 ch	04.1997 > 01.1999
XSARA (N1) - 1.5 D	57 ch	04.1997 > 01.1999
XSARA Break (N2) - 1.4 i	75 ch	10.1997 > 01.1999
XSARA Break (N2) - 1.5 D	57 ch	10.1997 > 01.1999
XSARA Coupe (N0) - 1.4 i	75 ch	03.1998 > 01.1999
ZX (N2) - 1.1	54 ch	03.1991 > 08.1993
	60 ch	03.1991 > 06.1997
ZX (N2) - 1.4	75 ch	03.1991 > 06.1997
ZX (N2) - 1.4 i	75 ch	03.1991 > 06.1997
ZX Break (N2) - 1.4 i	75 ch	10.1993 > 10.1997

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.