


## DONNEES TECHNIQUES

Compressed length [mm]	<b>550</b>
Uncompressed length [mm]	<b>557</b>
Number of splines (wheels side)	<b>38</b>
Number of Teeth, ABS ring	<b>45</b>
<b>for vehicles with ABS</b>	
ABS Ring Ø [mm]	<b>81</b>
Shape of the joint (gearbox side)	<b>Star-form</b>
ABS ring type	<b>W</b>
(wheels side) CV Joint Ø [mm]	<b>98</b>
(gearbox side) CV Joint Ø [mm]	<b>90</b>
Diam. ext. plate (A) [mm]	<b>130</b>
Number of mounting bores	<b>6</b>
Ø mounting holes [mm]	<b>10</b>

## PHOTOS

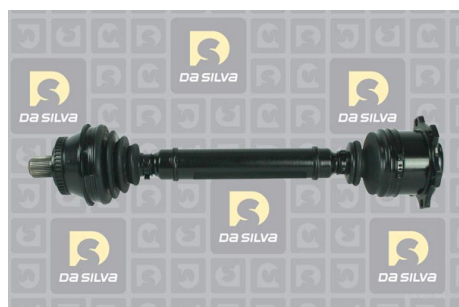


## DOCUMENTS

- BT-100**    **Conseils de montage des cardans**
- BT-104**    **Soufflets et Triaxes FIAT**
- BT-105**    **Soufflets et Triaxes SEAT**
- BT-131**    **Refus des carcasses transmissions**

## APPLICATIONS

<b>AUDI</b>		
A6 (97-04) (4B, C5) - 1.9 TDI	110 ch	02.1997 > 01.2005
	115 ch	07.2000 > 01.2005
A6 (97-04) (4B, C5) - 2.4	136 ch	07.1998 > 01.2005
	163 ch	02.1997 > 01.2005
	165 ch	02.1997 > 01.2005
A6 (97-04) (4B, C5) - 2.4 quattro	163 ch	02.1997 > 01.2005
	165 ch	02.1997 > 01.2005
	170 ch	08.2001 > 01.2005
A6 (97-04) (4B, C5) - 2.5 TDI	150 ch	07.1997 > 01.2005
	180 ch	02.2000 > 01.2005
A6 (97-04) Avant (4B, C5) - 1.9 TDI	110 ch	12.1997 > 01.2005
	115 ch	07.2000 > 01.2005
A6 (97-04) Avant (4B, C5) - 2.4	136 ch	07.1998 > 01.2005
	163 ch	12.1997 > 01.2005
	165 ch	12.1997 > 01.2005
A6 (97-04) Avant (4B, C5) - 2.5 TDI	150 ch	12.1997 > 01.2005

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.