


DONNEES TECHNIQUES

Length [mm]	930
Number of splines (wheels side)	26
Number of Teeth, ABS ring	27
for vehicles with ABS	
(wheels side) shoulder Ø [mm]	49
ABS ring type	R
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	29
(gearbox side) CV Joint Ø [mm]	90

PHOTOS

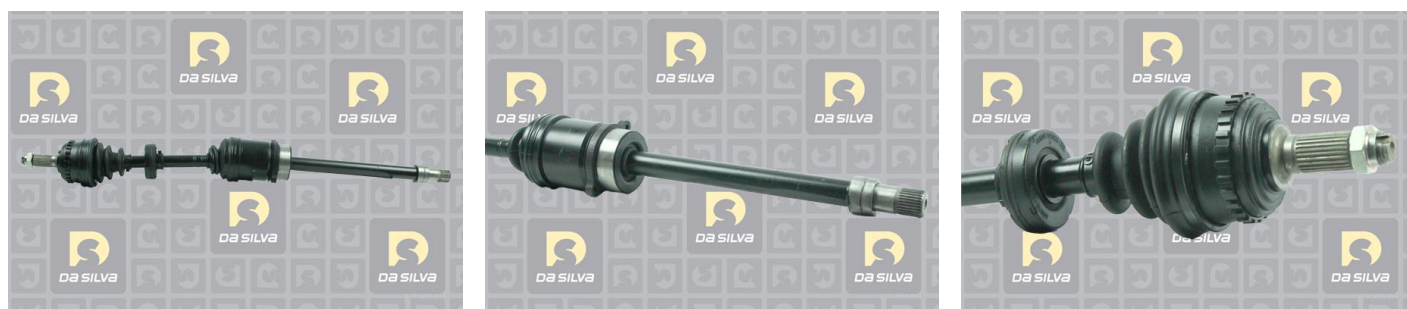

DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

APPLICATIONS

ROVER		
200 Hatchback (XW) - 218 D	71 ch	09.1991 > 10.1995
200 Hatchback (XW) - 218 TD	88 ch	09.1991 > 10.1995
400 (XW) - 418 D	67 ch	09.1991 > 04.1995
400 (XW) - 418 TD	88 ch	09.1991 > 04.1995
400 Tourer (XW) - 1.8 TD	88 ch	09.1993 > 11.1998

⚠ Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.