


DONNEES TECHNIQUES

Length [mm]	940
Number of splines (wheels side)	26
Number of Teeth, ABS ring	43
	for vehicles with ABS
(wheels side) shoulder Ø [mm]	49
ABS ring type	R
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	29
(gearbox side) CV Joint Ø [mm]	90

PHOTOS

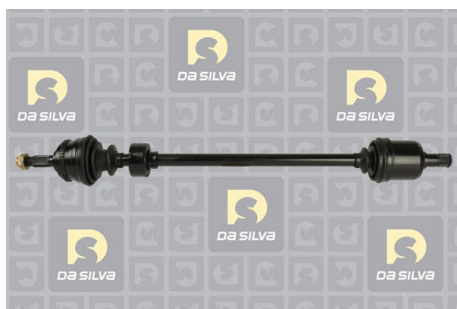


DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

ROVER		
25 (RF) - 2.0 iDT	101 ch	10.1999 >
200 (RF) - 220 D/SD	86 ch	11.1995 > 03.2000
200 (RF) - 220 SDi	105 ch	11.1995 > 03.2000
200 Coupe (XW) - 220 GSi	136 ch	05.1994 > 06.1999
200 Coupe (XW) - 220 Turbo	200 ch	10.1992 > 06.1999
200 Hatchback (XW) - 220 GTi	136 ch	01.1993 > 10.1995
	140 ch	09.1991 > 10.1995
200 Hatchback (XW) - 220 Turbo	200 ch	01.1993 > 10.1995
400 (RT) - 420 Si Lux	136 ch	12.1995 > 03.2000
400 (XW) - 420 GSi/SLI/GTI/Vite	136 ch	01.1993 > 04.1995
400 (XW) - 420 GTI/GSI/Vitesse	140 ch	02.1992 > 04.1995
400 (XW) - 420 Turbo	200 ch	01.1993 > 04.1995
400 Hatchback (RT) - 420 Si Lux	136 ch	12.1995 > 03.2000
400 Tourer (XW) - 2.0 i	136 ch	05.1994 > 11.1998

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.