
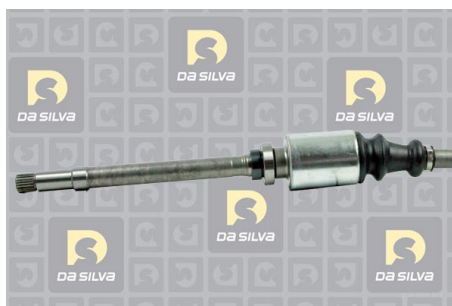


DONNEES TECHNIQUES

| | |
|----------------------------------|------------|
| Length [mm] | 880 |
| Number of splines (wheels side) | 21 |
| for vehicles without ABS | |
| (wheels side) shoulder Ø [mm] | 54 |
| (wheels side) CV Joint Ø [mm] | 86 |
| Number of splines (gearbox side) | 22 |
| (gearbox side) CV Joint Ø [mm] | 72 |
| (gearbox side) shoulder Ø [mm] | 30 |

PHOTOS

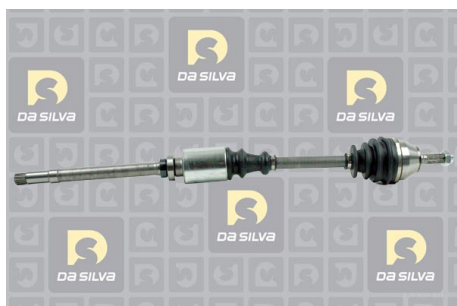


DOCUMENTS

| | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

| PEUGEOT | | |
|---------------------------------------|-------|-------------------|
| 306 3 volumes (7B, N3, N5) - 1.1 | 60 ch | 06.1994 > 05.2001 |
| 306 3 volumes (7B, N3, N5) - 1.4 SL | 75 ch | 06.1994 > 05.2001 |
| 306 3/5 portes (7A, 7C, N3, N5) - 1.1 | 60 ch | 05.1993 > 05.2001 |
| 306 3/5 portes (7A, 7C, N3, N5) - 1.4 | 75 ch | 05.1993 > 05.2001 |

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.