


## DONNEES TECHNIQUES

Compressed length [mm]	<b>615</b>
Uncompressed length [mm]	<b>645</b>
Number of splines (wheels side)	<b>21</b>
<b>for vehicles without ABS</b>	
(wheels side) shoulder Ø [mm]	<b>54</b>
(wheels side) CV Joint Ø [mm]	<b>86</b>
Number of splines (gearbox side)	<b>22</b>
(gearbox side) CV Joint Ø [mm]	<b>72</b>
(gearbox side) shoulder Ø [mm]	<b>40</b>

## PHOTOS

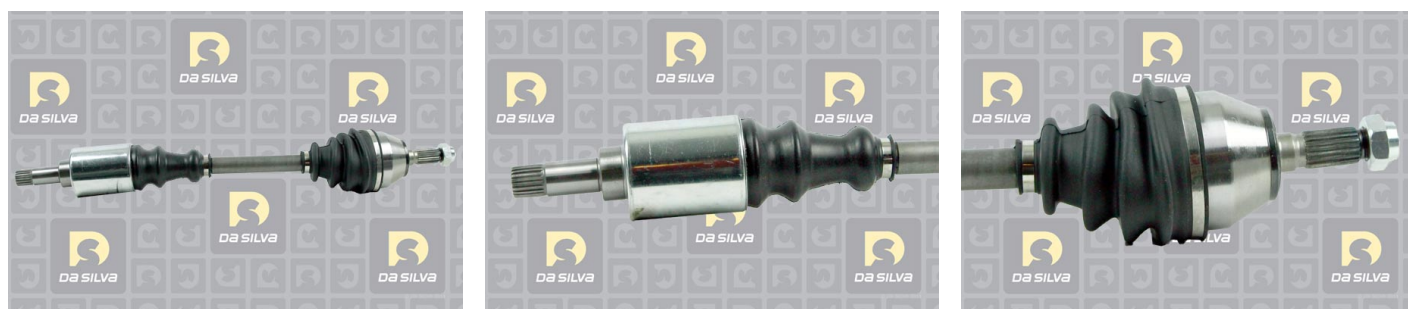

## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>PEUGEOT</b>		
306 3 volumes (7B, N3, N5) - 1.1	60 ch	06.1994 > 05.2001
306 3 volumes (7B, N3, N5) - 1.4 SL	75 ch	06.1994 > 05.2001
306 3/5 portes (7A, 7C, N3, N5) - 1.1	60 ch	05.1993 > 05.2001
306 3/5 portes (7A, 7C, N3, N5) - 1.4	75 ch	05.1993 > 05.2001

**⚠** Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.