


DONNEES TECHNIQUES

Length [mm]	875
Number of splines (wheels side)	25
for vehicles without ABS	
(wheels side) shoulder Ø [mm]	55
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	24
(gearbox side) CV Joint Ø [mm]	77
(gearbox side) shoulder Ø [mm]	30

PHOTOS

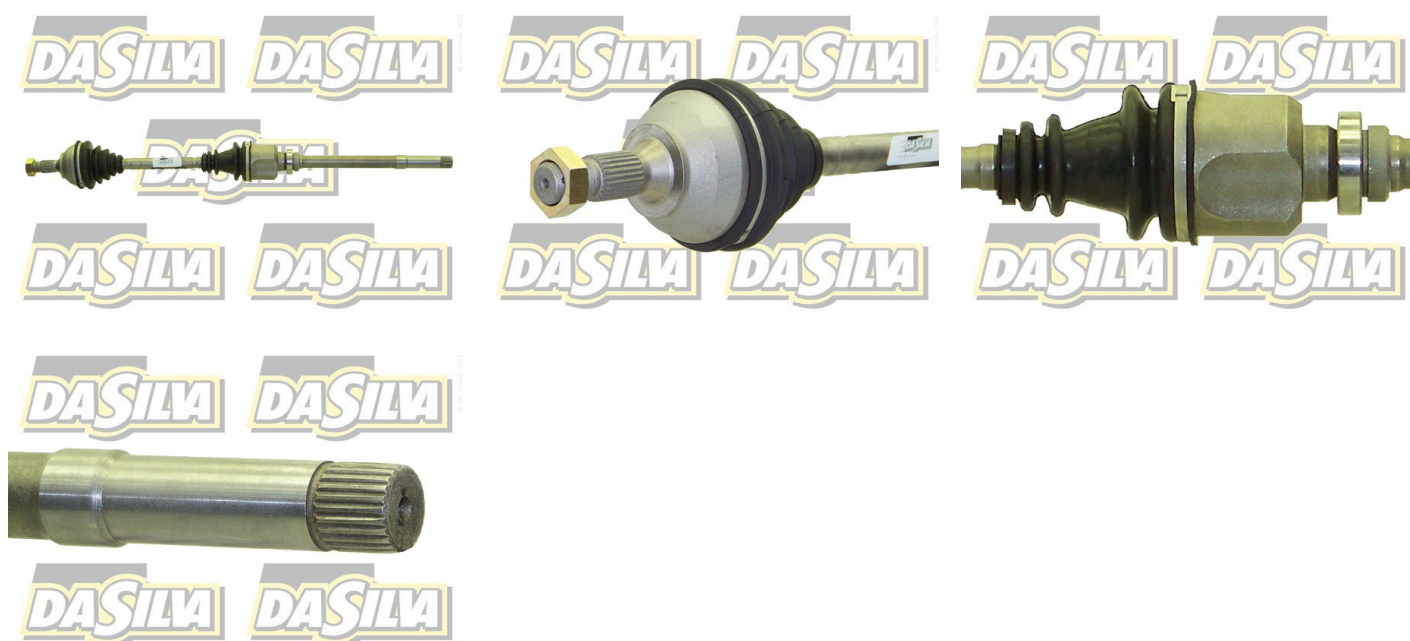


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

PEUGEOT		
306 3 volumes (7B, N3, N5) - 2.0 ST	121 ch	07.1994 > 05.2001
306 3/5 portes (7A, 7C, N3, N5) - 2.0 16V	132 ch	03.1997 > 05.2001
306 Cabriolet (7D, N3, N5) - 2.0 16V	132 ch	03.1997 > 04.2002
405 (87-92) (15B) - 1.8 Turbo Diesel	90 ch	03.1988 > 12.1992
405 (87-92) (15B) - 1.9	120 ch	07.1988 > 12.1992
	126 ch	07.1987 > 12.1993
405 (87-92) (15B) - 1.9 4x4	109 ch	07.1988 > 12.1992
405 (87-92) (15B) - 1.9 Injection	105 ch	07.1987 > 12.1992
405 (87-92) (15B) - 1.9 Sport MI-16	147 ch	04.1988 > 12.1992
	158 ch	07.1987 > 11.1991
405 (87-92) (15B) - 1.9 SPort MI-16 4x4	147 ch	04.1988 > 12.1992
405 (87-92) Break (15E) - 1.8 TD	90 ch	10.1988 > 08.1992
405 (87-92) Break (15E) - 1.9	95 ch	10.1988 > 08.1992
	105 ch	10.1988 > 08.1992
	109 ch	10.1988 > 08.1992
	120 ch	10.1988 > 08.1992
405 (87-92) Break (15E) - 1.9 4x4	109 ch	10.1988 > 08.1992
405 (92-96) (4B) - 1.9 D	64 ch	08.1992 > 10.1995
	68 ch	06.1994 > 10.1995
405 (92-96) Break (4E) - 1.9 D	64 ch	08.1992 > 10.1996
	68 ch	06.1994 > 10.1996

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.