


## DONNEES TECHNIQUES

Compressed length [mm]	<b>600</b>
Uncompressed length [mm]	<b>630</b>
Number of splines (wheels side)	<b>25</b>
Number of Teeth, ABS ring	<b>48</b>
<b>for vehicles with ABS</b>	
ABS Ring Ø [mm]	<b>100</b>
(wheels side) shoulder Ø [mm]	<b>59</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>90</b>
Number of splines (gearbox side)	<b>24</b>
(gearbox side) CV Joint Ø [mm]	<b>80</b>

## PHOTOS

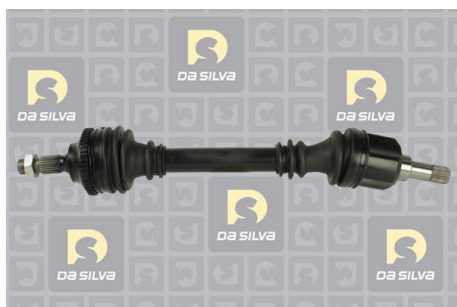


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>PEUGEOT</b>		
206 3/5 portes (2A/C, T3E) - 1.6 HDi 110	109 ch	05.2004 >
206 3/5 portes (2A/C, T3E) - 2.0 HDI 90	90 ch	12.1999 > 10.2000
206 3/5 portes (2A/C, T3E) - 2.0 S16	135 ch	04.1999 > 10.2000
206 CC (2D) - 1.6 HDi 110	109 ch	04.2005 >
206 SW (2E/K) - 1.6 HDi 110	109 ch	05.2004 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.