


DONNEES TECHNIQUES

Compressed length [mm]	610
Uncompressed length [mm]	650
Number of splines (wheels side)	25
Number of Teeth, ABS ring	29
for vehicles with ABS	
ABS Ring Ø [mm]	90
(wheels side) shoulder Ø [mm]	59
ABS ring type	R
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	24
(gearbox side) CV Joint Ø [mm]	81
(gearbox side) shoulder Ø [mm]	40

PHOTOS

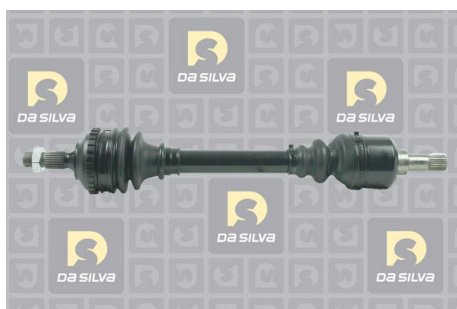


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

CITROËN		
XANTIA (93-98) (X1) - 1.9 Turbo D	90 ch	10.1994 > 07.1995
XANTIA (93-98) (X1) - 2.0 i 16V	132 ch	06.1995 > 01.1998
	150 ch	06.1994 > 07.1995
	152 ch	03.1993 > 07.1995
XANTIA (93-98) (X1) Break - 1.9 Turbo D	90 ch	06.1995 > 01.1998
XANTIA (93-98) (X1) Break - 2.0 i 16V	132 ch	06.1995 > 01.1998
PEUGEOT		
406 (8B) - 1.9 TD	90 ch	01.1996 > 03.1999
	92 ch	01.1996 > 03.1999
406 (8B) - 2.0 16V	132 ch	11.1995 > 03.1999
	135 ch	01.1999 > 03.1999
406 (8B) - 2.0 HDI 90	90 ch	02.1999 > 03.1999
406 Break (8E/F) - 1.9 TD	90 ch	10.1996 > 03.1999
406 Break (8E/F) - 2.0 16V	132 ch	10.1996 > 03.1999
	135 ch	01.1999 > 03.1999
406 Break (8E/F) - 2.0 HDI 90	90 ch	02.1999 > 03.1999
406 Coupe (8C) - 2.0 16V	132 ch	03.1997 > 03.1999
	135 ch	01.1999 > 03.1999

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.