


DONNEES TECHNIQUES

Compressed length [mm]	970
Uncompressed length [mm]	1005
Number of splines (wheels side)	28
	for vehicles without ABS
Thread (wheels side)	24X150
(wheels side) shoulder Ø [mm]	59
(wheels side) CV Joint Ø [mm]	95
Number of splines (gearbox side)	37
(gearbox side) CV Joint Ø [mm]	89
(gearbox side) shoulder Ø [mm]	32

PHOTOS

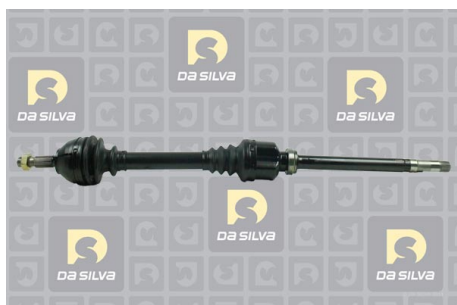

DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions


APPLICATIONS

CITROËN

C5 (2008-) (RD_) - 2.0 HDi 136	136 ch	02.2008 >
C5 (2008-) (RD_) - 2.0 HDi 140	140 ch	04.2009 >
C5 (2008-) (RD_) - 2.0 HDi 163	163 ch	04.2009 >
C5 (2008-) Break (TD_) - 2.0 HDi 136	136 ch	02.2008 >
C5 (2008-) Break (TD_) - 2.0 HDi 140	140 ch	04.2009 >
C5 (2008-) Break (TD_) - 2.0 HDi 165	163 ch	04.2009 >

PEUGEOT

407 (6D_) - 2.0 HDi 140	140 ch	08.2008 >
407 (6D_) - 2.0 HDi 135	136 ch	05.2004 >
407 Coupe (6C_) - 2.0 HDi 135	136 ch	10.2005 >
407 SW (6E_) - 2.0 HDi 140	140 ch	08.2008 >
407 SW (6E_) - 2.0 HDi 135	136 ch	05.2004 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.