


## DONNEES TECHNIQUES

Length [mm]	<b>905</b>
Number of splines (wheels side)	<b>25</b>
<b>for vehicles without ABS</b>	
(wheels side) shoulder Ø [mm]	<b>55</b>
(wheels side) CV Joint Ø [mm]	<b>90</b>
Number of splines (gearbox side)	<b>24</b>
(gearbox side) CV Joint Ø [mm]	<b>81</b>
(gearbox side) shoulder Ø [mm]	<b>30</b>

## PHOTOS

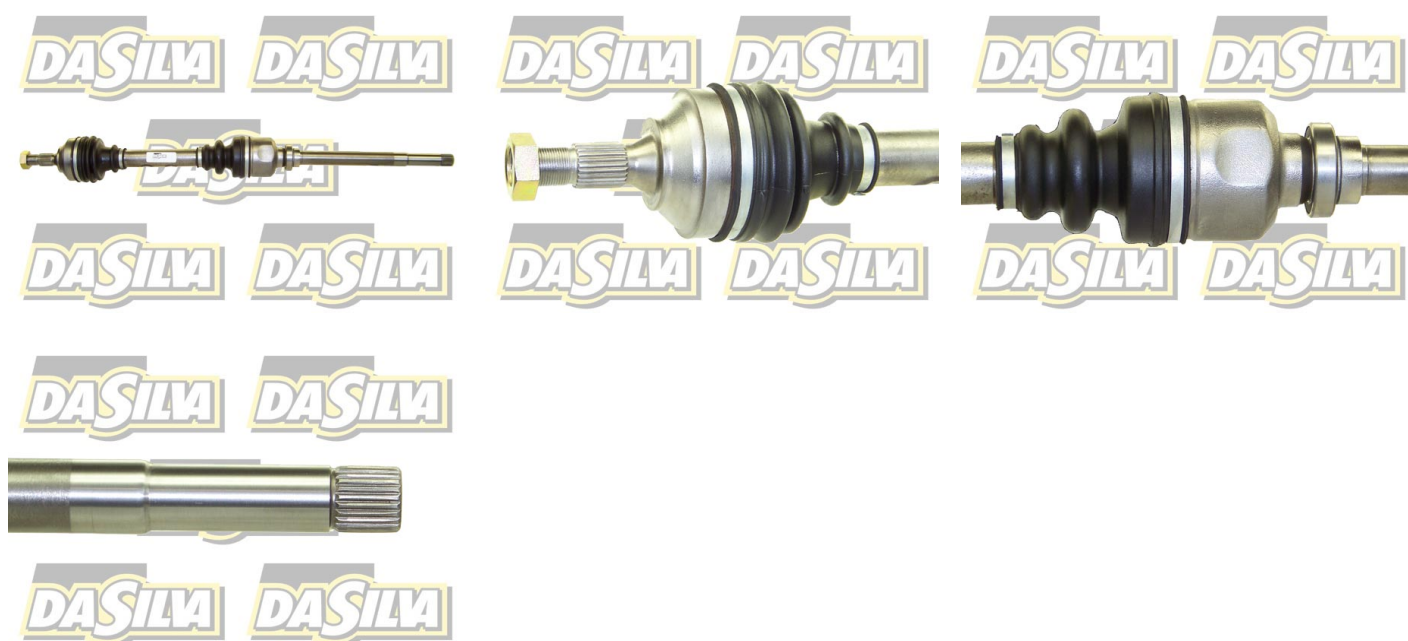


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>PEUGEOT</b>		
405 (92-96) (4B) - 1.9 TD	90 ch	08.1992 > 10.1995
405 (92-96) (4B) - 2.0	121 ch	08.1992 > 10.1995
405 (92-96) (4B) - 2.0 X4	121 ch	08.1992 > 10.1995
405 (92-96) (4B) - 2.0 16V	150 ch	06.1994 > 10.1995
405 (92-96) (4B) - 2.0 MI-16	152 ch	08.1992 > 10.1995
405 (92-96) (4B) - 2.0 T 16 X4	196 ch	08.1992 > 10.1995
405 (92-96) Break (4E) - 1.9 TD	90 ch	08.1992 > 10.1996
405 (92-96) Break (4E) - 2.0	121 ch	08.1992 > 10.1996
405 (92-96) Break (4E) - 2.0 4x4	121 ch	08.1992 > 10.1996

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.