


DONNEES TECHNIQUES

Length [mm]	680
Number of splines (wheels side)	28
for vehicles without ABS	
(wheels side) shoulder Ø [mm]	60
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	24
(gearbox side) CV Joint Ø [mm]	76
(gearbox side) shoulder Ø [mm]	40

PHOTOS

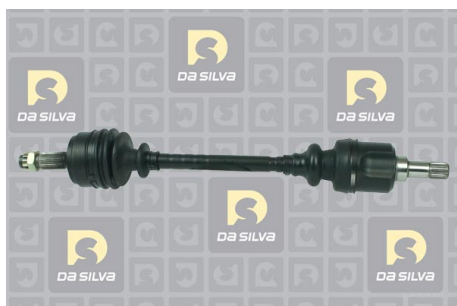


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

CITROËN		
XM (89-94) (Y3) - 2.0	114 ch	05.1989 > 04.1994
XM (89-94) (Y3) - 2.0 i	107 ch	05.1989 > 04.1994
	121 ch	05.1989 > 06.1994
XM (89-94) (Y3) - 2.1 D 12V	82 ch	05.1989 > 06.1994
XM (89-94) (Y3) Break - 2.0 i	121 ch	11.1991 > 04.1994
XM (89-94) (Y3) Break - 2.0 i (Y3A)	107 ch	11.1991 > 04.1994
XM (89-94) (Y3) Break - 2.1 D 12V	82 ch	11.1991 > 04.1994
XM (94-01) (Y4) Break - 2.1 D12	82 ch	07.1994 > 06.1996

PEUGEOT		
605 (6B) - 2.0	107 ch	02.1990 > 09.1999
	114 ch	06.1989 > 09.1999
	121 ch	06.1989 > 09.1999
605 (6B) - 2.1 D	82 ch	06.1989 > 07.1995

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.