


## DONNEES TECHNIQUES

Length [mm]	<b>680</b>
Number of splines (wheels side)	<b>28</b>
Number of Teeth, ABS ring	<b>48</b>
	<b>for vehicles with ABS</b>
(wheels side) shoulder Ø [mm]	<b>60</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>90</b>
Number of splines (gearbox side)	<b>24</b>
(gearbox side) CV Joint Ø [mm]	<b>76</b>
(gearbox side) shoulder Ø [mm]	<b>40</b>

## PHOTOS

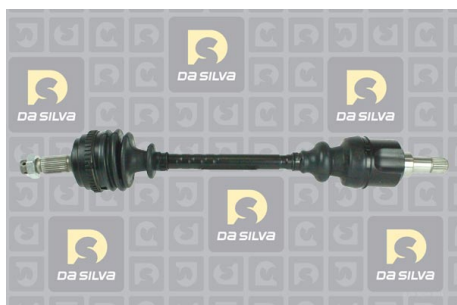


## DOCUMENTS

- |               |  |
|---------------|--|
| <b>BT-100</b> | <b>Conseils de montage des cardans</b>   |
| <b>BT-104</b> | <b>Soufflets et Triaxes FIAT</b>         |
| <b>BT-105</b> | <b>Soufflets et Triaxes SEAT</b>         |
| <b>BT-131</b> | <b>Refus des carcasses transmissions</b> |

## APPLICATIONS

<b>CITROËN</b>		
XM (89-94) (Y3) - 2.0	114 ch	05.1989 > 04.1994
XM (89-94) (Y3) - 2.0 i	107 ch	05.1989 > 04.1994
	121 ch	05.1989 > 06.1994
XM (89-94) (Y3) - 2.1 D 12V	82 ch	05.1989 > 06.1994
XM (89-94) (Y3) Break - 2.0 i	121 ch	11.1991 > 04.1994
XM (89-94) (Y3) Break - 2.0 i (Y3A)	107 ch	11.1991 > 04.1994
XM (89-94) (Y3) Break - 2.1 D 12V	82 ch	11.1991 > 04.1994
XM (94-01) (Y4) Break - 2.1 D12	82 ch	07.1994 > 06.1996
<b>PEUGEOT</b>		
605 (6B) - 2.0	107 ch	02.1990 > 09.1999
	114 ch	06.1989 > 09.1999
	121 ch	06.1989 > 09.1999
605 (6B) - 2.1 D	82 ch	06.1989 > 07.1995

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.