


## DONNEES TECHNIQUES

Length [mm]	<b>940</b>
Number of splines (wheels side)	<b>28</b>
Number of Teeth, ABS ring	<b>48</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>100</b>
(wheels side) shoulder Ø [mm]	<b>80</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>100</b>
Number of splines (gearbox side)	<b>37</b>
(gearbox side) CV Joint Ø [mm]	<b>100</b>
(gearbox side) shoulder Ø [mm]	<b>32</b>

## PHOTOS

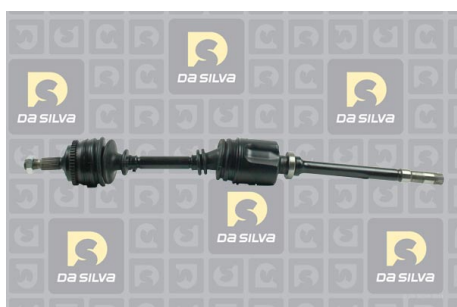

## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>


## APPLICATIONS

### CITROËN

XM (89-94) (Y3) - 2.0 i Turbo	141 ch	09.1992 > 06.1994
XM (89-94) (Y3) - 2.1 TD 12V	109 ch	05.1989 > 06.1994
XM (89-94) (Y3) - 3.0 V6	167 ch	05.1989 > 06.1994
XM (89-94) (Y3) - 3.0 V6 24V	200 ch	07.1990 > 06.1994
XM (89-94) (Y3) Break - 2.0 Turbo	141 ch	09.1992 > 04.1994
XM (89-94) (Y3) Break - 2.1 TD 12V	109 ch	11.1991 > 04.1994
XM (89-94) (Y3) Break - 3.0 V6	167 ch	11.1991 > 04.1994

### PEUGEOT

605 (6B) - 2.0 Turbo	141 ch	07.1992 > 06.1994
	147 ch	07.1991 > 06.1994
605 (6B) - 2.1 Turbo Diesel	109 ch	06.1989 > 06.1994
605 (6B) - 3.0	167 ch	10.1989 > 06.1994
605 (6B) - 3.0 SV 24	200 ch	08.1989 > 06.1994

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.