


## DONNEES TECHNIQUES

Length [mm]	<b>853</b>
Number of splines (wheels side)	<b>25</b>
	<b>for vehicles without ABS</b>
Thread (wheels side)	<b>M24X150</b>
(wheels side) shoulder Ø [mm]	<b>57</b>
(wheels side) CV Joint Ø [mm]	<b>86</b>
Number of splines (gearbox side)	<b>24</b>
(gearbox side) CV Joint Ø [mm]	<b>77</b>
(gearbox side) shoulder Ø [mm]	<b>30</b>

## PHOTOS

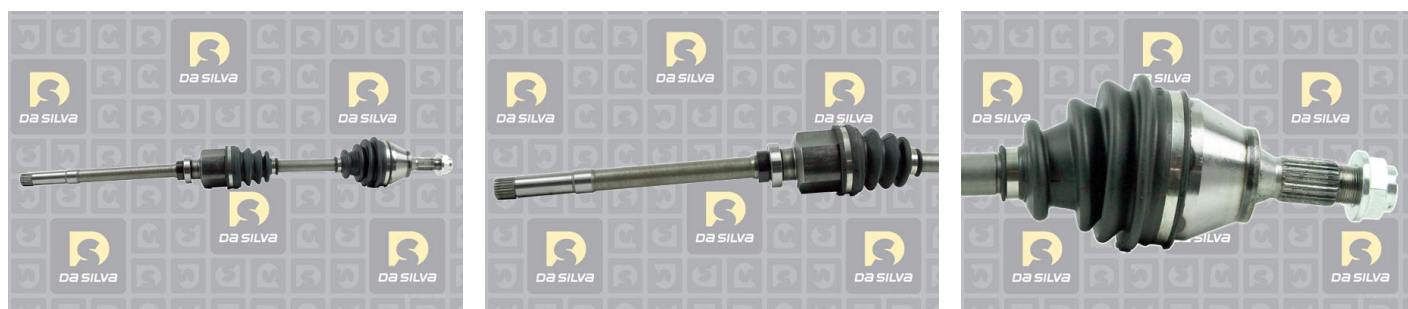


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>PEUGEOT</b>		
309 (85-89) (10C, 10A) - 1.4	67 ch	03.1989 > 07.1989
	75 ch	03.1989 > 07.1989
	84 ch	03.1989 > 07.1989
309 (85-89) (10C, 10A) - 1.5	86 ch	06.1987 > 12.1989
309 (85-89) (10C, 10A) - 1.6	72 ch	08.1987 > 07.1989
	75 ch	10.1985 > 07.1989
	80 ch	10.1985 > 07.1989
	94 ch	01.1986 > 07.1989
	103 ch	11.1985 > 09.1988
309 (85-89) (10C, 10A) - 1.6 KAT	75 ch	09.1986 > 12.1989
309 (85-89) (10C, 10A) - 1.9	98 ch	03.1986 > 07.1989
	102 ch	10.1985 > 07.1989
	109 ch	07.1988 > 07.1989
309 (85-89) (10C, 10A) - 1.9 D	64 ch	06.1986 > 07.1989
309 (89-93) (3C, 3A) - 1.6	88 ch	07.1989 > 12.1993

<b>PEUGEOT</b>		
(suite) 309 (89-93) (3C, 3A) - 1.6	92 ch	07.1989 > 12.1993
	94 ch	07.1989 > 12.1993
309 (89-93) (3C, 3A) - 1.8 Diesel	60 ch	07.1989 > 12.1993
309 (89-93) (3C, 3A) - 1.9	98 ch	08.1989 > 12.1993
	109 ch	10.1990 > 12.1993
309 (89-93) (3C, 3A) - 1.9 Diesel	64 ch	07.1989 > 12.1993

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.