


DONNEES TECHNIQUES

Compressed length [mm]	575
Uncompressed length [mm]	610
Number of splines (wheels side)	25
	for vehicles without ABS
Thread (wheels side)	M24X150
(wheels side) shoulder Ø [mm]	57
(wheels side) CV Joint Ø [mm]	86
Number of splines (gearbox side)	24
(gearbox side) CV Joint Ø [mm]	77
(gearbox side) shoulder Ø [mm]	40

PHOTOS

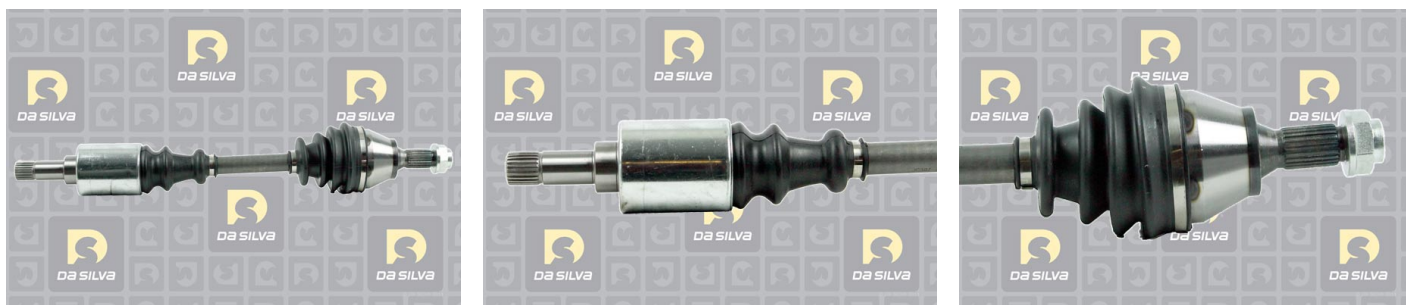


DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

PEUGEOT		
309 (85-89) (10C, 10A) - 1.4	67 ch	03.1989 > 07.1989
	75 ch	03.1989 > 07.1989
	84 ch	03.1989 > 07.1989
309 (85-89) (10C, 10A) - 1.5	86 ch	06.1987 > 12.1989
309 (85-89) (10C, 10A) - 1.6	72 ch	08.1987 > 07.1989
	75 ch	10.1985 > 07.1989
	80 ch	10.1985 > 07.1989
	94 ch	01.1986 > 07.1989
	103 ch	11.1985 > 09.1988
309 (85-89) (10C, 10A) - 1.6 KAT	75 ch	09.1986 > 12.1989
309 (85-89) (10C, 10A) - 1.9	98 ch	03.1986 > 07.1989
	102 ch	10.1985 > 07.1989
	109 ch	07.1988 > 07.1989
309 (85-89) (10C, 10A) - 1.9 D	64 ch	06.1986 > 07.1989
309 (89-93) (3C, 3A) - 1.6	88 ch	07.1989 > 12.1993
	92 ch	07.1989 > 12.1993
	94 ch	07.1989 > 12.1993
309 (89-93) (3C, 3A) - 1.8 Diesel	60 ch	07.1989 > 12.1993
309 (89-93) (3C, 3A) - 1.9	98 ch	08.1989 > 12.1993
	109 ch	10.1990 > 12.1993
309 (89-93) (3C, 3A) - 1.9 Diesel	64 ch	07.1989 > 12.1993

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.