


## DONNEES TECHNIQUES

Length [mm]	<b>625</b>
Number of splines (wheels side)	<b>27</b>
Number of Teeth, ABS ring	<b>48</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>83</b>
ABS ring type	<b>W</b>
(wheels side) CV Joint Ø [mm]	<b>86</b>
(gearbox side) CV Joint Ø [mm]	<b>94</b>

## PHOTOS

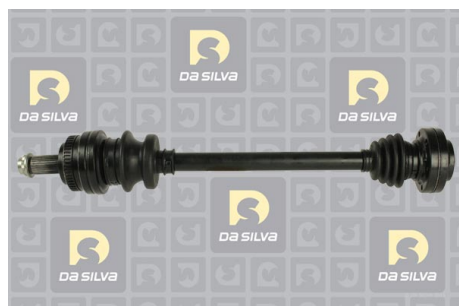


## DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

## APPLICATIONS

<b>BMW</b>		
3 Series (90-99) (E36) - 316i	100 ch	09.1990 > 09.1993
	102 ch	07.1993 > 02.1998
	102 ch	09.1990 > 09.1993
3 Series (90-99) (E36) - 318i	113 ch	12.1990 > 10.1993
	115 ch	10.1993 > 02.1998
3 Series (90-99) (E36) - 318is	140 ch	03.1993 > 09.1997
	140 ch	09.1995 > 02.1998
3 Series (90-99) (E36) - 318tds	90 ch	01.1995 > 02.1998
3 Series (90-99) (E36) - 320i	150 ch	09.1990 > 02.1998
3 Series (90-99) (E36) - 323i	170 ch	03.1995 > 02.1998
3 Series (90-99) Break/Touring (E36) - 316i	102 ch	01.1996 > 10.1999
3 Series (90-99) Break/Touring (E36) - 318i	116 ch	07.1995 > 10.1999
3 Series (90-99) Break/Touring (E36) - 318tds	90 ch	01.1995 > 10.1999
3 Series (90-99) Break/Touring (E36) - 320i	150 ch	01.1995 > 10.1999
3 Series (90-99) Cabriolet (E36) - 318i	115 ch	01.1994 > 04.1999
3 Series (90-99) Cabriolet (E36) - 320i	150 ch	12.1993 > 04.1999

<b>BMW</b>		
3 Series (90-99) Coupe (E36) - 316i	102 ch	09.1993 > 04.1999
3 Series (90-99) Coupe (E36) - 318is	140 ch	03.1992 > 10.1995
	140 ch	09.1995 > 04.1999
3 Series (90-99) Coupe (E36) - 320i	150 ch	03.1992 > 04.1999

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.