


DONNEES TECHNIQUES

Length [mm]	1127
Number of splines (wheels side)	28
Number of Teeth, ABS ring	51
	for vehicles with ABS
ABS Ring Ø [mm]	102
ABS ring type	R
(wheels side) CV Joint Ø [mm]	98
Number of splines (gearbox side)	39
(gearbox side) CV Joint Ø [mm]	85

PHOTOS

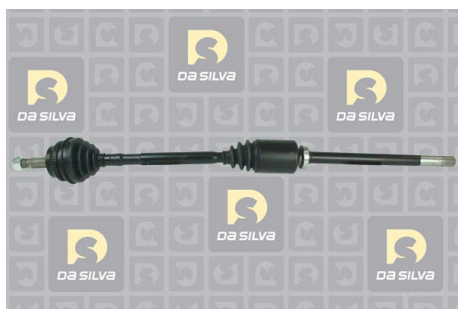

DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

NISSAN


INTERSTAR Bus (X70) - dCI 90	90 ch	07.2002 >
INTERSTAR Camionnette (X70) - dCI 90	90 ch	07.2002 >

OPEL

MOVANO Combi (J9) - 1.9 DTI	80 ch	09.2000 > 10.2001
	82 ch	10.2001 >
MOVANO Combi (J9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Combi (J9) - 2.5 DTI	115 ch	10.2001 >
MOVANO Fourgon (F9) - 1.9 DTI	80 ch	09.2000 > 10.2001
	82 ch	10.2001 >
MOVANO Fourgon (F9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Fourgon (F9) - 2.5 DTi	99 ch	10.2003 >
	115 ch	10.2001 >
MOVANO Kipper (H9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Kipper (H9) - 2.5 DTi	99 ch	10.2003 >
MOVANO Plateau (U9, E9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Plateau (U9, E9) - 2.5 DTI	115 ch	10.2001 >

RENAULT

MASTER (98-03) Bus (JD/ND) - 2.2 dCI 90	90 ch	09.2000 >
MASTER (98-03) Camionnette (FD) - 2.2 dCI 90	90 ch	09.2000 >
MASTER (98-03) plateau (ED/HD/UD) - 2.2 dCI 90	90 ch	09.2000 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.