
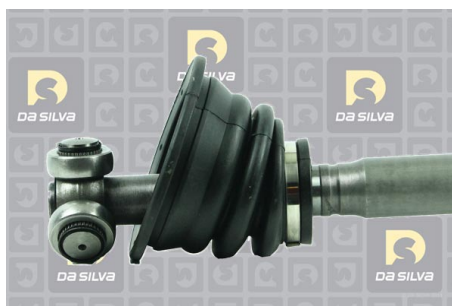


## DONNEES TECHNIQUES

Length [mm]	<b>670</b>
Number of splines (wheels side)	<b>28</b>
Number of Teeth, ABS ring	<b>51</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>102</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>98</b>
(gearbox side) rollers Ø [mm]	<b>37</b>

## PHOTOS

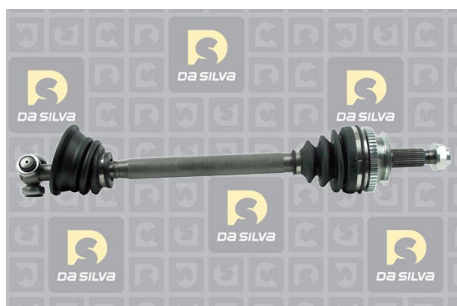


## DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

## APPLICATIONS

<b>NISSAN</b>		
INTERSTAR Bus (X70) - dCi 90	90 ch	07.2002 >
INTERSTAR Bus (X70) - dCi 120	115 ch	07.2002 >
INTERSTAR Camionnette (X70) - dCi 90	90 ch	07.2002 >
INTERSTAR Camionnette (X70) - dCi 120	115 ch	07.2002 >

<b>OPEL</b>		
MOVANO Combi (J9) - 1.9 DTI	80 ch	09.2000 > 10.2001
	82 ch	10.2001 >
MOVANO Combi (J9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Combi (J9) - 2.5 D	80 ch	07.1998 > 09.2000
MOVANO Combi (J9) - 2.5 DTI	115 ch	10.2001 >
MOVANO Combi (J9) - 2.8 DTI	114 ch	07.1998 > 10.2001
MOVANO Fourgon (F9) - 1.9 DTI	80 ch	09.2000 > 10.2001
	82 ch	10.2001 >
MOVANO Fourgon (F9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Fourgon (F9) - 2.5 D	80 ch	01.1999 > 09.2000
MOVANO Fourgon (F9) - 2.5 DTi	99 ch	10.2003 >
	115 ch	10.2001 >
MOVANO Fourgon (F9) - 2.8 DTI	114 ch	01.1999 > 10.2001
MOVANO Kipper (H9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Kipper (H9) - 2.5 D	80 ch	01.1999 > 09.2000
MOVANO Kipper (H9) - 2.5 DTi	99 ch	10.2003 >
MOVANO Kipper (H9) - 2.8 DTI	114 ch	01.1999 > 10.2001
MOVANO Plateau (U9, E9) - 2.2 DTI	90 ch	09.2000 >
MOVANO Plateau (U9, E9) - 2.5 D	80 ch	07.1998 > 09.2000
MOVANO Plateau (U9, E9) - 2.5 DTI	115 ch	10.2001 >
MOVANO Plateau (U9, E9) - 2.8 DTI	114 ch	07.1998 > 10.2001
<b>RENAULT</b>		
MASTER (98-03) Bus (JD/ND) - 2.2 dCi 90	90 ch	09.2000 >
MASTER (98-03) Bus (JD/ND) - 2.5 D	80 ch	07.1998 > 01.2001
MASTER (98-03) Bus (JD/ND) - 2.5 dCi 120	115 ch	10.2001 >
MASTER (98-03) Bus (JD/ND) - 2.8 dTi	114 ch	07.1998 > 10.2001
MASTER (98-03) Camionnette (FD) - 2.2 dCi 90	90 ch	09.2000 >
MASTER (98-03) Camionnette (FD) - 2.5 D	80 ch	07.1998 > 01.2001
MASTER (98-03) Camionnette (FD) - 2.5 dCi 120	115 ch	10.2001 >
MASTER (98-03) Camionnette (FD) - 2.8 dTi	114 ch	07.1998 > 10.2001
MASTER (98-03) plateau (ED/HD/UD) - 2.2 dCi 90	90 ch	09.2000 >
MASTER (98-03) plateau (ED/HD/UD) - 2.5 D	80 ch	07.1998 > 01.2001
MASTER (98-03) plateau (ED/HD/UD) - 2.5 dCi 120	115 ch	10.2001 >
MASTER (98-03) plateau (ED/HD/UD) - 2.8 dTi	114 ch	07.1998 > 10.2001
MASTER (03-10) Bus (JD) - 2.5 dCi	114 ch	01.2004 >
MASTER (03-10) Bus (JD) - 2.5 dCi 100 (JDCV)	99 ch	10.2003 >
MASTER (03-10) Camionnette (HD, FD) - 2.5 dCi	114 ch	01.2004 >
MASTER (03-10) Camionnette (HD, FD) - 2.5 dCi 100 (HD0U, FD0U, HD0V, FD0V)	99 ch	10.2003 >
MASTER (03-10) plateau (ED, UD) - 2.5 dCi	114 ch	01.2004 >
MASTER (03-10) plateau (ED, UD) - 2.5 dCi 100 (ED4V, ED8V)	99 ch	10.2003 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.