


## DONNEES TECHNIQUES

Length [mm]	<b>700</b>
Number of splines (wheels side)	<b>23</b>
Number of Teeth, ABS ring	<b>44</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>85</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>90</b>
(gearbox side) rollers Ø [mm]	<b>30</b>

## PHOTOS

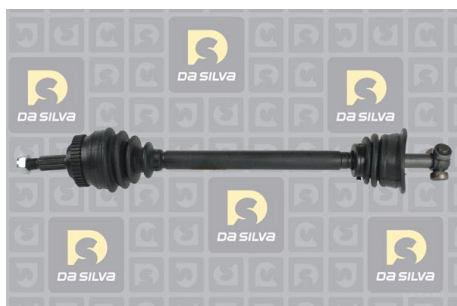

## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>RENAULT</b>		
LAGUNA (94-01) (B56_, 556_) - 1.8 (B56A, B56B)	90 ch	11.1993 > 12.1996
LAGUNA (94-01) (B56_, 556_) - 1.8 (B56S, B56T, B560)	90 ch	08.1995 > 12.1996
LAGUNA (94-01) (B56_, 556_) - 1.8 (B56Z)	94 ch	08.1995 > 12.1996
LAGUNA (94-01) (B56_, 556_) - 2.0	95 ch	11.1993 > 12.1996
LAGUNA (94-01) (B56_, 556_) - 2.0 (B56C, B56H, B56N)	113 ch	11.1993 > 12.1996
LAGUNA (95-01) Nevada (K56_) - 1.8 (K56S, K56T, K560)	90 ch	09.1995 > 12.1996
LAGUNA (95-01) Nevada (K56_) - 1.8 (K56Z)	94 ch	09.1995 > 12.1996
LAGUNA (95-01) Nevada (K56_) - 2.0 (K56C, K56H)	113 ch	09.1995 > 12.1996

**⚠** Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.