
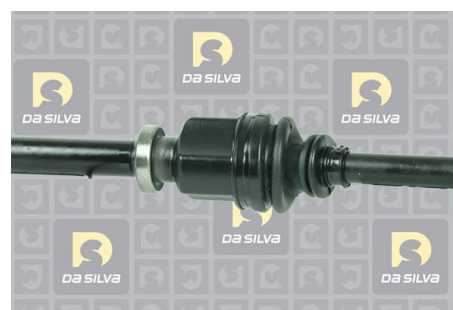


DONNEES TECHNIQUES

Length [mm]	915
Number of splines (wheels side)	23
	for vehicles with ABS
ABS ring type	On hub
(wheels side) CV Joint Ø [mm]	81
Number of splines (gearbox side)	26
(gearbox side) CV Joint Ø [mm]	77

PHOTOS

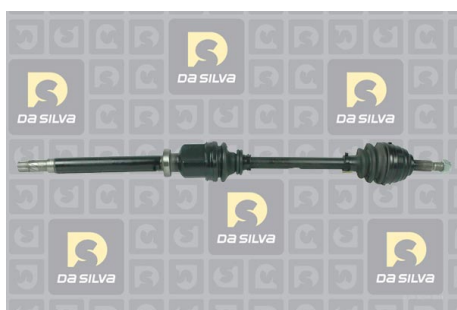


DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

APPLICATIONS

RENAULT		
KANGOO (2008-) (KW0/1_) - 1.5 dCi 70	68 ch	02.2008 >
KANGOO (2008-) Express (FW0/1_) - 1.5 dCi 70	68 ch	02.2008 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.4 16V	82 ch	10.2003 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.4 16V (BM0B, CM0B)	98 ch	11.2002 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.5 dCi	101 ch	10.2003 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.5 dCi (BM0F, CM0F)	82 ch	11.2002 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.6 16V	112 ch	01.2007 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.6 16V (BM0C, CM0C)	113 ch	11.2002 >
MEGANE (02-08) 3 volumes (LM0/1_) - 1.4	82 ch	09.2003 >
	98 ch	09.2003 >
MEGANE (02-08) 3 volumes (LM0/1_) - 1.5 dCi	82 ch	09.2003 >
	101 ch	02.2004 >
MEGANE (02-08) 3 volumes (LM0/1_) - 1.6	113 ch	09.2003 >
MEGANE (02-08) Break (KM0/1_) - 1.4	98 ch	08.2003 >
MEGANE (02-08) Break (KM0/1_) - 1.5 dCi	82 ch	09.2003 >
	101 ch	02.2004 >
MEGANE (02-08) Break (KM0/1_) - 1.6	113 ch	09.2003 >

RENAULT		
MEGANE (02-08) Break (KM0/1_) - 1.6 16V	112 ch	01.2007 >
MEGANE (02-08) CC (EM0/1_) - 1.6	113 ch	09.2003 >
MEGANE (02-08) CC (EM0/1_) - 1.6 16V	112 ch	01.2007 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.