


DONNEES TECHNIQUES

Compressed length [mm]	639
Uncompressed length [mm]	665
Number of splines (wheels side)	25
	for vehicles with ABS
(wheels side) shoulder Ø [mm]	53
ABS ring type	On hub
(wheels side) CV Joint Ø [mm]	84
Number of splines (gearbox side)	39
(gearbox side) CV Joint Ø [mm]	81
(gearbox side) shoulder Ø [mm]	39

PHOTOS

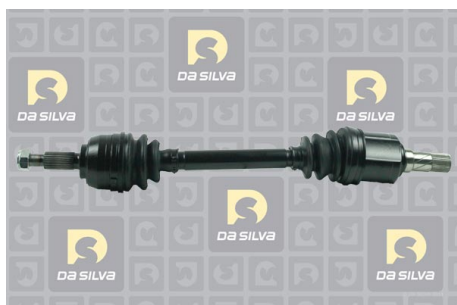


DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

RENAULT		
GRAND SCÉNIC (04-10) (JM0/1_) - 1.9 dCi	110 ch	05.2005 >
	120 ch	04.2004 >
	131 ch	05.2005 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.9 dCi	131 ch	05.2005 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 1.9 dCi (BM0G, CM0G)	120 ch	11.2002 >
MEGANE (02-08) (BM0/1_, CM0/1_) - 2.0 16V (BM0U, CM0U)	135 ch	11.2002 >
MEGANE (02-08) 3 volumes (LM0/1_) - 1.9 dCi	120 ch	09.2003 >
	131 ch	05.2005 >
MEGANE (02-08) Break (KM0/1_) - 1.9 dCi	120 ch	09.2003 >
	131 ch	05.2005 >
MEGANE (02-08) CC (EM0/1_) - 1.9 dCi	120 ch	09.2003 >
MEGANE (02-08) CC (EM0/1_) - 2.0	135 ch	09.2003 >
SCÉNIC (03-09) (JM0/1_) - 1.9 dCi	110 ch	05.2005 >
	131 ch	05.2005 >
SCÉNIC (03-09) (JM0/1_) - 1.9 dCi (JM12)	120 ch	06.2003 >
SCÉNIC (03-09) (JM0/1_) - 2.0 16V Turbo (JM0W)	163 ch	05.2004 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.