


## DONNEES TECHNIQUES

Length [mm]	<b>600</b>
Number of splines (wheels side)	<b>23</b>
Number of Teeth, ABS ring	<b>30</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>87</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>87</b>
(gearbox side) rollers Ø [mm]	<b>37</b>

## PHOTOS

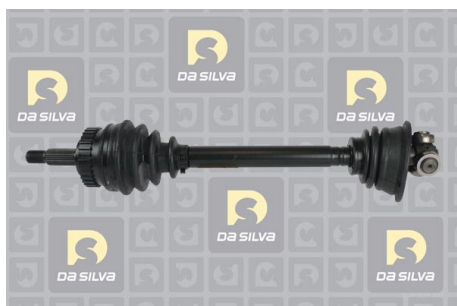

## DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

## APPLICATIONS

<b>RENAULT</b>		
SAFRANE (92-96) (B54_) - 2.0 (B540)	105 ch	11.1992 > 07.1996
SAFRANE (92-96) (B54_) - 2.0 12V (B542, B54E)	132 ch	04.1992 > 07.1996
SAFRANE (92-96) (B54_) - 2.1 dT (B546)	88 ch	11.1993 > 07.1996
SAFRANE (92-96) (B54_) - 2.2 (B541)	107 ch	04.1992 > 07.1996
SAFRANE (92-96) (B54_) - 2.2 (B543)	137 ch	04.1992 > 07.1996
SAFRANE (92-96) (B54_) - 2.5 dT (B548)	113 ch	12.1992 > 07.1996
SAFRANE (92-96) (B54_) - 3.0 V6 (B54B, B544)	167 ch	12.1992 > 07.1996

**⚠** Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.