


DONNEES TECHNIQUES

Length [mm]	1000
Number of splines (wheels side)	23
Number of Teeth, ABS ring	30
for vehicles with ABS	
ABS Ring Ø [mm]	87
ABS ring type	R
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	39
(gearbox side) CV Joint Ø [mm]	94

PHOTOS

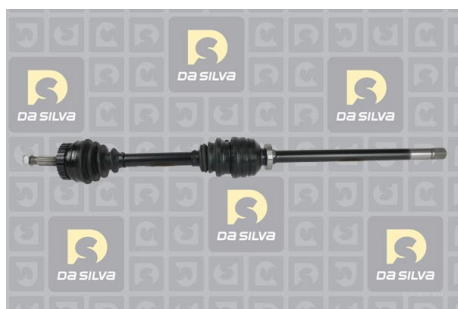

DOCUMENTS

- BT-100** **Conseils de montage des cardans**
- BT-104** **Soufflets et Triaxes FIAT**
- BT-105** **Soufflets et Triaxes SEAT**
- BT-131** **Refus des carcasses transmissions**


APPLICATIONS

RENAULT

SAFRANE (92-96) (B54_) - 2.5 dT (B548)

113 ch

12.1992 > 07.1996

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.