


DONNEES TECHNIQUES

Compressed length [mm]	750
Number of splines (wheels side)	23
Number of Teeth, ABS ring	44
	for vehicles with ABS
ABS Ring Ø [mm]	85
ABS ring type	R
(wheels side) CV Joint Ø [mm]	81
Number of splines (gearbox side)	23
(gearbox side) CV Joint Ø [mm]	72
	ABS ring 15mm wide

PHOTOS

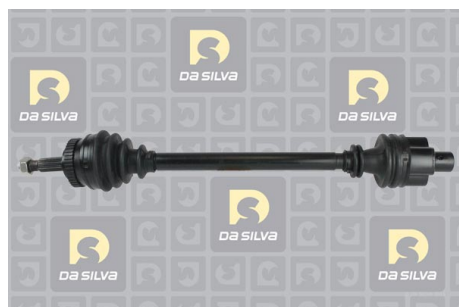


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

RENAULT		
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA08, BA0N)	98 ch	03.1997 > 02.1999
MEGANE (95-02) (BA0/1_) - 1.9 dTi	94 ch	09.1996 > 02.1999
MEGANE (95-02) (BA0/1_) - 2.0 16V (BA0H)	147 ch	07.1996 > 02.1999
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V (EA0H)	147 ch	10.1996 > 11.1999
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V IDE (EA03, EA0P, EA14)	140 ch	11.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA08, LA0N)	98 ch	03.1997 > 02.1999
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi	94 ch	09.1996 > 02.1999
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dTi (DA0N)	98 ch	03.1997 > 02.2001
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V (DA0H)	147 ch	03.1996 > 11.1999
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V IDE (DA03, DA0P, DA14)	140 ch	11.1999 > 08.2003
MEGANE (95-03) Scenic (JA0/1_) - 1.9 D (JA0J)	64 ch	03.1997 > 09.1999
MEGANE (95-03) Scenic (JA0/1_) - 1.9 dT (JA0K, JA0Y)	90 ch	01.1997 > 09.1999
MEGANE (95-03) Scenic (JA0/1_) - 1.9 dTi (JA0N)	98 ch	04.1997 > 09.1999

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.