


DONNEES TECHNIQUES

Compressed length [mm]	725
Number of splines (wheels side)	21
Number of Teeth, ABS ring	26
	for vehicles with ABS
ABS Ring Ø [mm]	85
(wheels side) shoulder Ø [mm]	50
ABS ring type	R
(wheels side) CV Joint Ø [mm]	86
Number of splines (gearbox side)	23
(gearbox side) CV Joint Ø [mm]	83
	With mounting pin (gearbox side)

PHOTOS

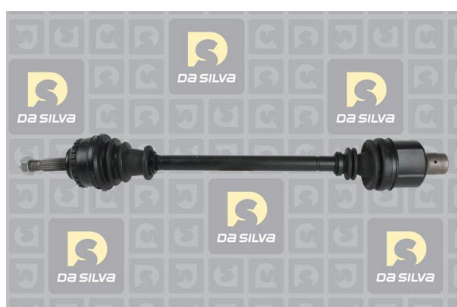


DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

RENAULT		
KANGOO (97-07) (KC0/1_) - 1.2 (KC0A, KC0K, KC0F, KC01)	58 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.4 (KC0C, KC0H, KC0B, KC0M)	75 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.9 D 55 (KC0D)	54 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.9 D 65 (KC0E, KC02, KC0J, KC0N)	64 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.2 (FC01, FC0A, FC0F)	58 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.4 (FC0C, FC0B, FC0H, FC0M)	75 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.9 D 55 (FC0D)	54 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.9 D 65 (FC0E, FC02, FC0J, FC0N)	64 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.9 dTi (FC0U)	80 ch	02.2000 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.