


DONNEES TECHNIQUES

Length [mm]	625
Number of splines (wheels side)	21
	for vehicles without ABS
(wheels side) shoulder Ø [mm]	50
(wheels side) CV Joint Ø [mm]	86
(gearbox side) rollers Ø [mm]	30

PHOTOS

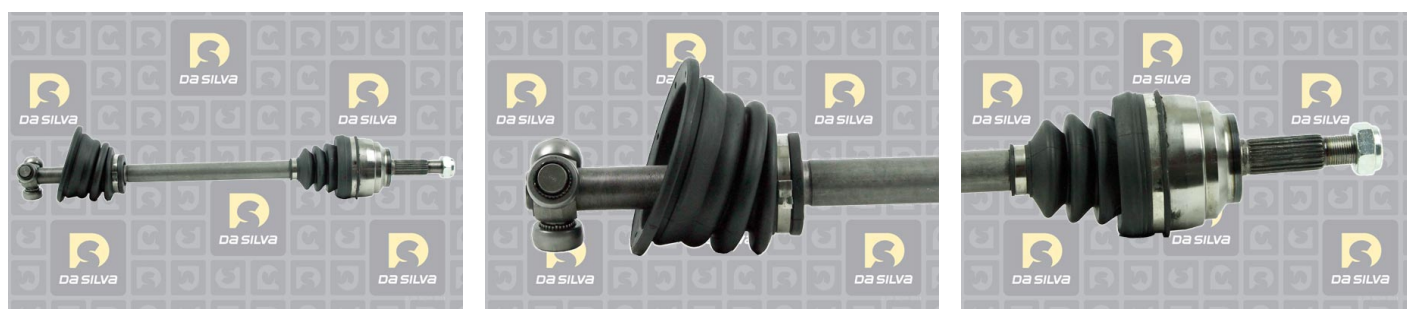

DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

APPLICATIONS

RENAULT		
KANGOO (97-07) (KC0/1_) - 1.2 (KC0A, KC0K, KC0F, KC01)	58 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.2 16V (KC03, KC05, KC06, KC0T, KC0W)	75 ch	06.2001 >
KANGOO (97-07) (KC0/1_) - 1.4 (KC0C, KC0H, KC0B, KC0M)	75 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.6 16V	95 ch	06.2001 >
KANGOO (97-07) (KC0/1_) - 1.9 D 55 (KC0D)	54 ch	03.1998 > 08.1999
KANGOO (97-07) (KC0/1_) - 1.9 D 65 (KC0E, KC02, KC0J, KC0N)	64 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.2 (FC01, FC0A, FC0F)	58 ch	03.1998 >
KANGOO (97-07) Express (FC0/1_) - 1.2 16V (FC05)	75 ch	10.2001 >
KANGOO (97-07) Express (FC0/1_) - 1.4 (FC0C, FC0B, FC0H, FC0M)	75 ch	03.1998 >
KANGOO (97-07) Express (FC0/1_) - 1.6 16V	95 ch	10.2001 >
KANGOO (97-07) Express (FC0/1_) - 1.9 D 55 (FC0D)	54 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.9 D 65 (FC0E, FC02, FC0J, FC0N)	64 ch	03.1998 > 08.1999
KANGOO (97-07) Express (FC0/1_) - 1.9 dTi (FC0U)	80 ch	02.2000 >

⚠ Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.