


## DONNEES TECHNIQUES

Length [mm]	<b>628</b>
Number of splines (wheels side)	<b>23</b>
Number of Teeth, ABS ring	<b>44</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>85</b>
(wheels side) shoulder Ø [mm]	<b>57</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>84</b>
(gearbox side) rollers Ø [mm]	<b>30</b>
	<b>Exists version with 21 spine 4503BT</b>

## PHOTOS

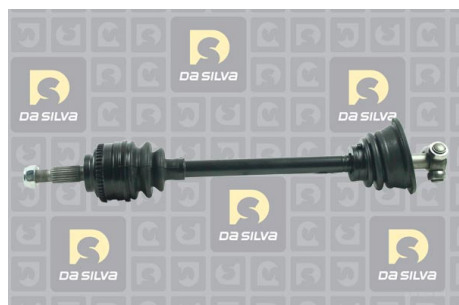


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>RENAULT</b>		
CLIO (98-10) (BB__, CB__) - 1.5 dCi (BB08, CB08)	82 ch	06.2001 > 05.2005
KANGOO (97-07) (KC0/1_) - 1.5 dCi (KC08, KC09)	82 ch	07.2002 > 05.2005
KANGOO (97-07) (KC0/1_) - 1.9 dTi (KC0U)	80 ch	02.2000 >
KANGOO (97-07) Express (FC0/1_) - 1.5 dCi (FC07)	65 ch	12.2001 >
KANGOO (97-07) Express (FC0/1_) - 1.5 dCi (FC08, FC09)	82 ch	04.2003 >
KANGOO (97-07) Express (FC0/1_) - 1.9 D 65 (FC0E, FC02, FC0J, FC0N)	64 ch	08.1997 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.