


DONNEES TECHNIQUES

Length [mm]	780
Number of splines (wheels side)	23
Number of Teeth, ABS ring	44
	for vehicles with ABS
ABS Ring Ø [mm]	85
ABS ring type	R
(wheels side) CV Joint Ø [mm]	89
Number of splines (gearbox side)	23
	ABS ring 8mm wide

PHOTOS

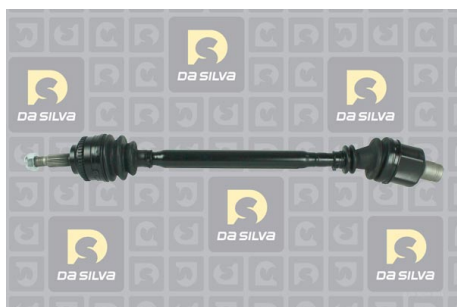


DOCUMENTS

- BT-100** **Conseils de montage des cardans**
- BT-104** **Soufflets et Triaxes FIAT**
- BT-105** **Soufflets et Triaxes SEAT**
- BT-131** **Refus des carcasses transmissions**

APPLICATIONS

RENAULT		
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA08, BA0N)	98 ch	03.1999 > 02.2001
MEGANE (95-02) (BA0/1_) - 1.9 dTi	94 ch	03.1999 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dTi (KA0N)	98 ch	03.1999 > 02.2001
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA08, LA0N)	98 ch	03.1999 > 02.2001
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi	94 ch	03.1999 >
SCÉNIC (99-03) (JA0/1_) - 1.9 dCi (JA05, JA1F)	102 ch	11.2000 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA0N)	98 ch	09.1999 > 08.2003

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.