


## DONNEES TECHNIQUES

Length [mm]	<b>650</b>
Number of splines (wheels side)	<b>23</b>
Number of Teeth, ABS ring	<b>44</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>85</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>81</b>
(gearbox side) rollers Ø [mm]	<b>30</b>
	<b>ABS ring 8mm wide</b>

## PHOTOS

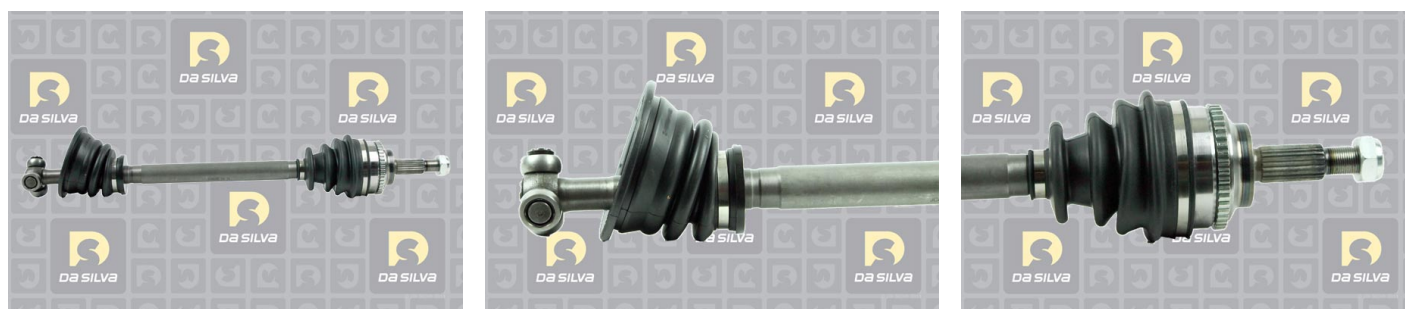


## DOCUMENTS

- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

## APPLICATIONS

<b>RENAULT</b>		
MEGANE (95-02) (BA0/1_) - 1.9 dCi (BA05, BA1F)	102 ch	02.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA08, BA0N)	98 ch	03.1997 > 02.1999
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA1U)	80 ch	02.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 dTi	94 ch	09.1996 > 02.1999
MEGANE (95-02) (BA0/1_) - 2.0 16V (BA0H)	147 ch	07.1996 > 02.1999
MEGANE (95-02) Break (KA0/1_) - 1.9 dCi (KA05, KA1F)	102 ch	02.2001 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dTi (KA1U)	80 ch	02.2001 >
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V (EA0H)	147 ch	10.1996 > 11.1999
MEGANE (95-02) Cabriolet (EA0/1_) - 2.0 16V IDE (EA03, EA0P, EA14)	140 ch	11.1999 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dCi (LA05, LA1F)	102 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA08, LA0N)	98 ch	03.1997 > 02.1999
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA1U)	80 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi	94 ch	09.1996 > 02.1999
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dCi (DA05, DA1F)	102 ch	02.2001 > 08.2003
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dTi (DA0N)	98 ch	03.1997 > 02.2001

<b>RENAULT</b>		
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V (DA0H)	147 ch	03.1996 > 11.1999
MEGANE (95-03) Coupé (DA0/1_) - 2.0 16V IDE (DA03, DA0P, DA14)	140 ch	11.1999 > 08.2003
MEGANE (95-03) Scenic (JA0/1_) - 1.9 D (JA0J)	64 ch	03.1997 > 09.1999
MEGANE (95-03) Scenic (JA0/1_) - 1.9 dT (JA0K, JA0Y)	90 ch	01.1997 > 09.1999
MEGANE (95-03) Scenic (JA0/1_) - 1.9 dTi (JA0N)	98 ch	04.1997 > 09.1999
SCÉNIC (99-03) (JA0/1_) - 1.9 dCi (JA05, JA1F)	102 ch	11.2000 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA0N)	98 ch	09.1999 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA1U)	80 ch	02.2001 > 08.2003

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.