


## DONNEES TECHNIQUES

Length [mm]	<b>750</b>
Number of splines (wheels side)	<b>23</b>
Number of Teeth, ABS ring	<b>44</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>85</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>84</b>
Number of splines (gearbox side)	<b>23</b>
(gearbox side) CV Joint Ø [mm]	<b>78</b>
	<b>ABS ring 8mm wide</b>

## PHOTOS

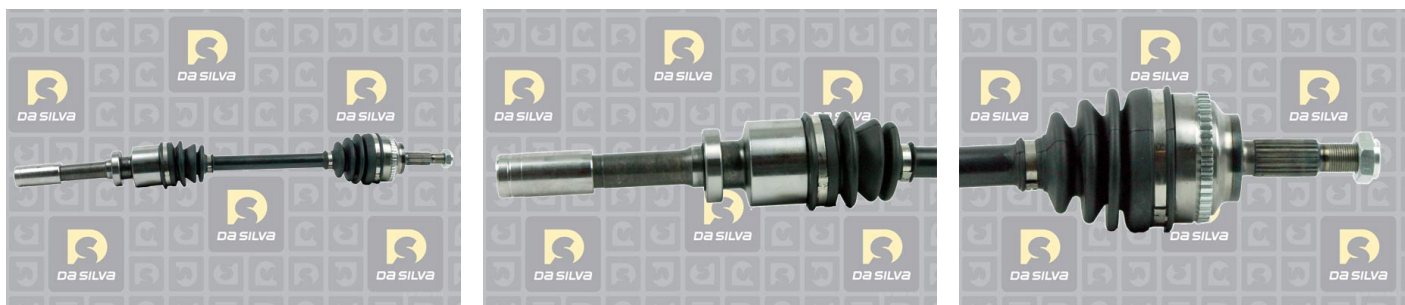


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>RENAULT</b>		
MEGANE (95-02) (BA0/1_) - 1.9 dCi (BA05, BA1F)	102 ch	02.2001 >
MEGANE (95-02) (BA0/1_) - 1.9 dTi (BA1U)	80 ch	02.2001 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dCi (KA05, KA1F)	102 ch	02.2001 >
MEGANE (95-02) Break (KA0/1_) - 1.9 dTi (KA1U)	80 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dCi (LA05, LA1F)	102 ch	02.2001 >
MEGANE (95-02) Classic (LA0/1_) - 1.9 dTi (LA1U)	80 ch	02.2001 >
MEGANE (95-03) Coupé (DA0/1_) - 1.9 dCi (DA05, DA1F)	102 ch	02.2001 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dCi (JA05, JA1F)	102 ch	11.2000 > 08.2003
SCÉNIC (99-03) (JA0/1_) - 1.9 dTi (JA1U)	80 ch	02.2001 > 08.2003

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.