


## DONNEES TECHNIQUES

Uncompressed length [mm]	<b>627</b>
Number of splines (wheels side)	<b>21</b>
Number of Teeth, ABS ring	<b>44</b>
<b>for vehicles with ABS</b>	
ABS Ring Ø [mm]	<b>85</b>
ABS ring type	<b>R</b>
(wheels side) CV Joint Ø [mm]	<b>86</b>
(gearbox side) rollers Ø [mm]	<b>30</b>

## PHOTOS

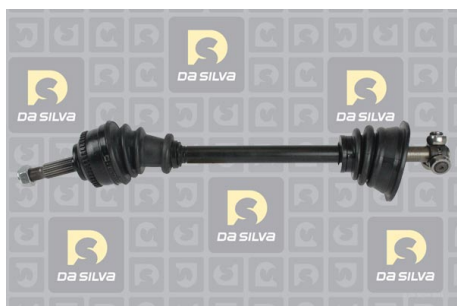

## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>RENAULT</b>		
TWINGO (93-06) (C06_) - 1.2 (C066, C068)	58 ch	12.1998 >
TWINGO (93-06) (C06_) - 1.2 (C067)	54 ch	12.1998 >
TWINGO (93-06) (C06_) - 1.2 16V (C060)	60 ch	08.2004 >
TWINGO (93-06) (C06_) - 1.2 16V (C06C, C06D, C06K)	75 ch	01.2001 >
TWINGO Société (S06_) - 1.2 (S066, S068)	58 ch	12.1998 >

**⚠** Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.