


DONNEES TECHNIQUES

Length [mm]	762
Number of splines (wheels side)	22
	for vehicles without ABS
Ø mounting holes [mm]	8
(wheels side) shoulder Ø [mm]	51
Number of mounting bores	6
(wheels side) CV Joint Ø [mm]	90
(gearbox side) CV Joint Ø [mm]	100

PHOTOS

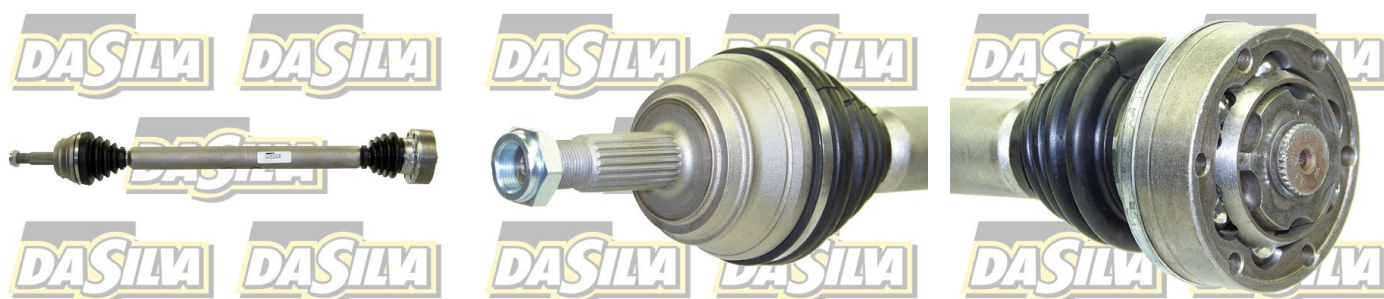


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

SEAT		
CORDOBA (93-99) (6K2/C2) - 1.8 i	90 ch	02.1993 > 06.1999
CORDOBA (93-99) (6K2/C2) - 1.8 i 16V	129 ch	10.1993 > 08.1996
CORDOBA (93-99) (6K2/C2) - 1.9 TD	75 ch	02.1993 > 08.1996
CORDOBA (93-99) (6K2/C2) - 1.9 TDI	90 ch	08.1996 > 06.1999
	110 ch	03.1997 > 06.1999
CORDOBA (93-99) (6K2/C2) - 2.0 i	115 ch	02.1993 > 06.1999
CORDOBA (93-99) (6K2/C2) - 2.0 i 16V	150 ch	08.1996 > 06.1999
CORDOBA (96-02) Vario (6K5) - 1.9 TDI	90 ch	08.1996 > 06.1999
	110 ch	07.1997 > 06.1999
IBIZA (93-99) (6K1) - 1.8 i	90 ch	03.1993 > 08.1999
IBIZA (93-99) (6K1) - 1.8 i 16V	129 ch	11.1993 > 08.1996
IBIZA (93-99) (6K1) - 1.9 TD	75 ch	03.1993 > 08.1996
IBIZA (93-99) (6K1) - 1.9 TDI	90 ch	08.1996 > 08.1999
	110 ch	02.1997 > 08.1999
IBIZA (93-99) (6K1) - 2.0 i	115 ch	03.1993 > 08.1999
IBIZA (93-99) (6K1) - 2.0 i 16V	150 ch	08.1996 > 08.1999

SEAT		
IBIZA (99-02) (6K2, 6K/GP01) - 1.8 T 20V Cupra	156 ch	07.2000 > 02.2002
IBIZA (99-02) (6K2, 6K/GP01) - 1.9 SDI	68 ch	08.1999 > 02.2002
IBIZA (99-02) (6K2, 6K/GP01) - 1.9 TDI	90 ch	08.1999 > 02.2002
	110 ch	08.1999 > 02.2002
INCA (6K9) - 1.9 TDI	90 ch	09.1996 >
TOLEDO (91-99) (1L) - 1.6 i	71 ch	05.1991 > 12.1993
	73 ch	05.1991 > 03.1999
	75 ch	01.1993 > 03.1999
	101 ch	11.1996 > 03.1999
TOLEDO (91-99) (1L) - 1.8 16V	125 ch	05.1991 > 03.1999
	133 ch	05.1991 > 03.1999
TOLEDO (91-99) (1L) - 1.8 i	88 ch	05.1991 > 12.1996
	90 ch	11.1993 > 12.1996
TOLEDO (91-99) (1L) - 1.9 TD	75 ch	05.1991 > 03.1999
TOLEDO (91-99) (1L) - 1.9 TDI	90 ch	08.1995 > 03.1999
	110 ch	11.1996 > 03.1999
TOLEDO (91-99) (1L) - 2.0 i	115 ch	05.1991 > 03.1999
VOLKSWAGEN		
CADDY (96-04) Break (9K9B) - 1.9 TDI	90 ch	10.1996 > 01.2004
CADDY (96-04) Camionnette (9K9A) - 1.9 TDI	90 ch	09.1996 > 01.2004
CORRADO (53I) - 1.8 16V	136 ch	04.1989 > 07.1992
CORRADO (53I) - 1.8 G60	160 ch	09.1988 > 09.1993
CORRADO (53I) - 2.0 i	115 ch	04.1993 > 12.1995
CORRADO (53I) - 2.0 i 16V	136 ch	08.1991 > 12.1995
FLIGHT 3 volumes (6KV2) - 90 1.9 TDI	90 ch	09.1996 > 09.2001
FLIGHT 3 volumes (6KV2) - 100 1.6	100 ch	12.1995 > 09.2001
GOLF (83-92) (19E, 1G1) - 1.6 TD	60 ch	08.1989 > 10.1991
	70 ch	08.1983 > 10.1991
	80 ch	04.1989 > 10.1991
GOLF (83-92) (19E, 1G1) - 1.8 GTI	105 ch	01.1985 > 07.1985
	107 ch	08.1985 > 10.1987
	112 ch	08.1983 > 10.1991
GOLF (83-92) (19E, 1G1) - 1.8 GTI 16V	129 ch	02.1986 > 10.1991
	139 ch	02.1986 > 06.1990
GOLF (83-92) (19E, 1G1) - 1.8 GTI G60	160 ch	04.1990 > 07.1991
GOLF (83-92) (19E, 1G1) - 1.8 GTI G60 Syncro	160 ch	08.1988 > 07.1991
GOLF (83-92) (19E, 1G1) - 1.8 GTI KAT	107 ch	01.1987 > 10.1991
JETTA (84-92) (A2, 1G2) - 1.8	107 ch	08.1985 > 10.1987
	112 ch	01.1984 > 10.1991
JETTA (84-92) (A2, 1G2) - 1.8 KAT	107 ch	01.1987 > 10.1991
JETTA (84-92) (A2, 1G2) - 1.8 16V	129 ch	08.1986 > 10.1991
	140 ch	06.1987 > 12.1989
POLO (97-02) Variant (6KV5) - 1.6	101 ch	05.1997 > 09.2001
POLO (97-02) Variant (6KV5) - 1.9 TDI	90 ch	05.1997 > 09.2001

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.