


DONNEES TECHNIQUES

Length [mm]	555
Number of splines (wheels side)	36
	for vehicles without ABS
(wheels side) CV Joint Ø [mm]	90
(gearbox side) CV Joint Ø [mm]	100
Number of mounting bores	6
Ø mounting holes [mm]	8

PHOTOS

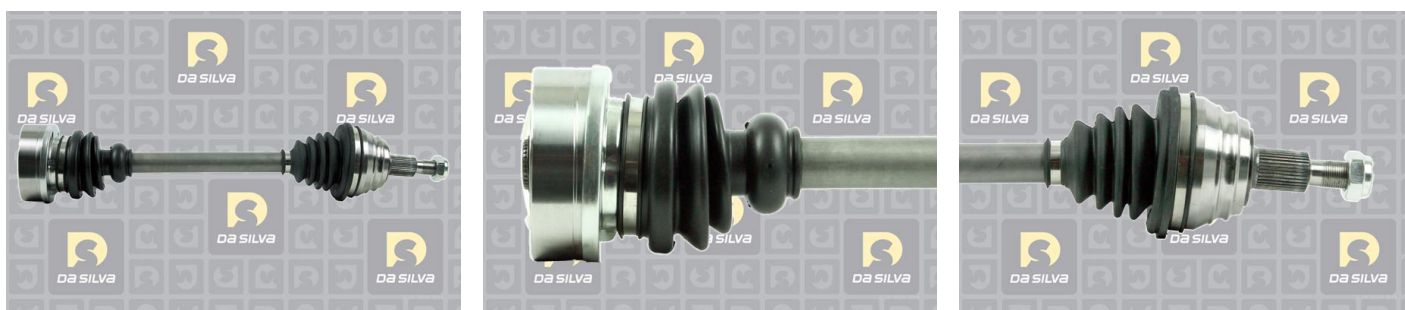

DOCUMENTS


- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

APPLICATIONS

AUDI		
A3 (96-03) (8L1) - 1.8	125 ch	09.1996 >
A3 (96-03) (8L1) - 1.9 TDI	90 ch	09.1996 > 07.2001
	100 ch	10.2000 > 05.2003
	110 ch	08.1997 > 07.2001

SEAT		
LEON (98-06) (1M1) - 1.8 20V	125 ch	11.1999 >
LEON (98-06) (1M1) - 1.9 TDI	90 ch	11.1999 >
	100 ch	10.2005 >
	110 ch	11.1999 >
TOLEDO (91-99) (1L) - 2.0 i 16V	150 ch	11.1993 > 03.1999
SKODA		
OCTAVIA (96-10) (1U2) - 1.9 TDI	90 ch	09.1996 >
	110 ch	08.1997 >
OCTAVIA (96-10) Combi (1U5) - 1.9 TDI	90 ch	07.1998 >
	110 ch	07.1998 >
OCTAVIA (96-10) Combi (1U5) - 1.9 TDI 4x4	90 ch	11.1999 > 09.2000
VOLKSWAGEN		
BORA (1J2) - 1.8	125 ch	10.1998 > 05.2005
BORA (1J2) - 1.8 4motion	125 ch	02.1999 > 05.2005
BORA (1J2) - 1.9 TDI	90 ch	10.1998 > 06.2001
	101 ch	09.2000 > 05.2005
	110 ch	10.1998 > 06.2001
BORA (1J2) - 1.9 TDI 4motion	90 ch	02.1999 > 06.2001
	101 ch	09.2000 > 05.2005
BORA (1J2) - 2.0	115 ch	10.1998 > 05.2005
BORA (1J2) - 2.0 4motion	115 ch	04.2000 > 05.2005
BORA Break (1J6) - 1.8 4motion	125 ch	05.1999 > 05.2005
BORA Break (1J6) - 1.9 TDI	90 ch	05.1999 > 06.2001
	101 ch	09.2000 > 05.2005
	110 ch	05.1999 > 06.2001
BORA Break (1J6) - 1.9 TDI 4motion	101 ch	09.2000 > 05.2005
BORA Break (1J6) - 2.0	115 ch	05.1999 > 05.2005
BORA Break (1J6) - 2.0 4motion	115 ch	04.2000 > 05.2005
CORRADO (53I) - 2.9 VR6	190 ch	08.1991 > 12.1995
GOLF (91-99) (1H1) - 2.0	115 ch	11.1991 > 08.1997
GOLF (91-99) (1H1) - 2.0 GTI 16V	150 ch	08.1992 > 08.1997
GOLF (91-99) (1H1) - 2.8 VR6	174 ch	01.1992 > 08.1997
GOLF (91-99) Break (1H5) - 2.0	115 ch	07.1993 > 04.1999
GOLF (97-05) (1J1) - 1.9 TDI	90 ch	10.1997 > 05.2004
	101 ch	09.2000 > 06.2005
	110 ch	08.1997 > 05.2004
GOLF (97-05) (1J1) - 1.9 TDI 4motion	90 ch	07.1998 > 04.2002
	101 ch	09.2000 > 06.2005
GOLF (99-05) Break (1J5) - 1.9 TDI	90 ch	05.1999 > 05.2006
	101 ch	09.2000 >
	110 ch	05.1999 > 06.2001
GOLF (99-05) Break (1J5) - 1.9 TDI 4motion	90 ch	05.1999 > 04.2002
	101 ch	09.2000 >
NEW BEETLE (97-11) (9C1, 1C1) - 1.6	102 ch	09.2000 >
NEW BEETLE (97-11) (9C1, 1C1) - 1.9 TDI	90 ch	01.1998 > 02.2001
	101 ch	02.2001 >
NEW BEETLE (97-11) (9C1, 1C1) - 2.0	115 ch	01.1998 >
NEW BEETLE Cabriolet (1Y7) - 1.6	102 ch	01.2003 >
NEW BEETLE Cabriolet (1Y7) - 1.9 TDI	100 ch	03.2003 >

VOLKSWAGEN		
NEW BEETLE Cabriolet (1Y7) - 2.0	115 ch	01.2003 >
VENTO (92-99) (1H2) - 2.0	115 ch	11.1991 > 09.1998
VENTO (92-99) (1H2) - 2.8 VR6	174 ch	01.1992 > 09.1998

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.