


DONNEES TECHNIQUES

Length [mm]	805
Number of splines (wheels side)	36
	for vehicles without ABS
(wheels side) CV Joint Ø [mm]	90
(gearbox side) CV Joint Ø [mm]	108
Number of mounting bores	6
Ø mounting holes [mm]	10

PHOTOS

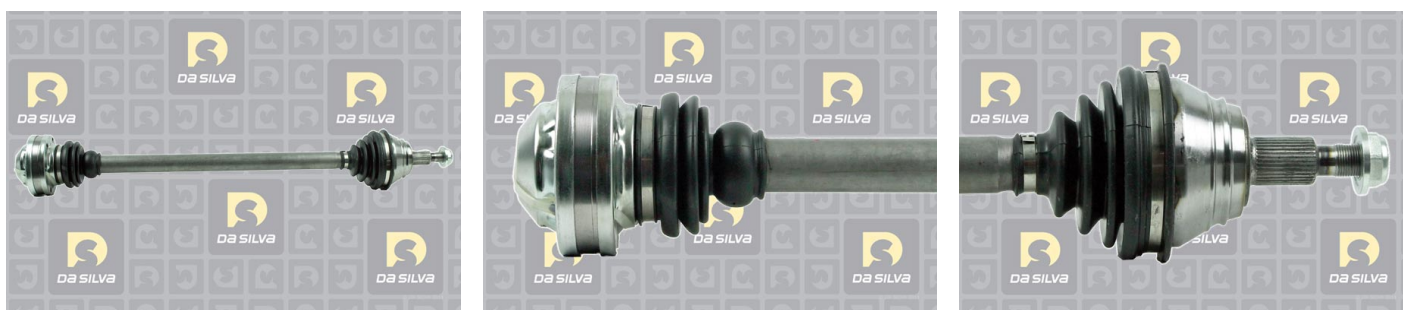

DOCUMENTS


- BT-100** Conseils de montage des cardans
- BT-104** Soufflets et Triaxes FIAT
- BT-105** Soufflets et Triaxes SEAT
- BT-131** Refus des carcasses transmissions

APPLICATIONS

AUDI		
A3 (96-03) (8L1) - 1.8 T	150 ch	12.1996 > 05.2003
	180 ch	12.1998 > 05.2003
A3 (96-03) (8L1) - 1.8 T quattro	180 ch	10.1998 > 05.2003
A3 (96-03) (8L1) - 1.9 TDI	130 ch	08.2000 >
TT (2006-) Roadster (8N9) - 1.8 T	180 ch	10.1998 >
TT (2006-) Roadster (8N9) - 1.8 T quattro	224 ch	10.1998 >

SEAT		
LEON (98-06) (1M1) - 1.8 20V T	180 ch	11.1999 >
LEON (98-06) (1M1) - 1.9 TDI	130 ch	05.2003 >
	150 ch	02.2001 >
TOLEDO (99-06) (1M2) - 1.9 TDI	130 ch	05.2003 > 05.2006
	150 ch	10.2000 > 05.2006

VOLKSWAGEN		
BORA (1J2) - 1.9 TDI	115 ch	12.1998 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2000 > 05.2005
BORA (1J2) - 1.9 TDI 4motion	115 ch	02.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2000 > 05.2005
BORA Break (1J6) - 1.6 16V	105 ch	02.2000 > 05.2005
BORA Break (1J6) - 1.9 TDI	115 ch	05.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2001 > 05.2005
BORA Break (1J6) - 1.9 TDI 4motion	115 ch	05.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2001 > 05.2005
GOLF (97-05) (1J1) - 1.9 TDI	115 ch	12.1998 > 06.2001
	130 ch	11.2000 > 06.2005
	150 ch	05.2000 > 06.2005
GOLF (97-05) (1J1) - 1.9 TDI 4motion	115 ch	09.1999 > 06.2001
	150 ch	02.2000 > 06.2005
GOLF (99-05) Break (1J5) - 1.9 TDI	115 ch	08.1999 > 06.2001
	130 ch	11.2000 >
GOLF (99-05) Break (1J5) - 1.9 TDI 4motion	115 ch	05.1999 > 06.2001
	130 ch	11.2000 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.