


## DONNEES TECHNIQUES

Compressed length [mm]	<b>520</b>
Uncompressed length [mm]	<b>553</b>
Number of splines (wheels side)	<b>36</b>
<b>for vehicles without ABS</b>	
(wheels side) CV Joint Ø [mm]	<b>98</b>
(gearbox side) CV Joint Ø [mm]	<b>108</b>
Number of mounting bores	<b>6</b>
Ø mounting holes [mm]	<b>10</b>

## PHOTOS

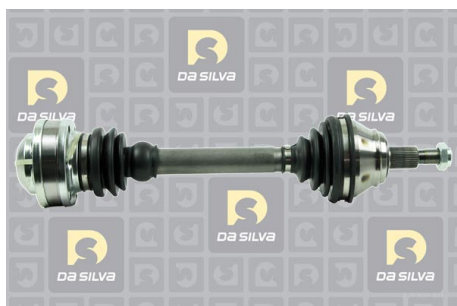


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>AUDI</b>		
A3 (96-03) (8L1) - 1.8 T	150 ch	12.1996 > 05.2003
	180 ch	12.1998 > 05.2003
A3 (96-03) (8L1) - 1.8 T quattro	150 ch	12.1996 > 05.2003
	180 ch	10.1998 > 05.2003
A3 (96-03) (8L1) - 1.9 TDI	130 ch	08.2000 >
A3 (96-03) (8L1) - 1.9 TDI quattro	130 ch	08.2000 >
TT (2006-) (8N3) - 1.8 T quattro	180 ch	10.1998 >
	224 ch	10.1998 >
TT (2006-) Roadster (8N9) - 1.8 T	180 ch	10.1998 >
TT (2006-) Roadster (8N9) - 1.8 T quattro	224 ch	10.1998 >

<b>SEAT</b>		
ALTEA (5P1) - 1.4 16V	86 ch	05.2006 >
ALTEA (5P1) - 1.6	102 ch	03.2004 >
LEON (98-06) (1M1) - 1.8 20V T	180 ch	11.1999 >
LEON (98-06) (1M1) - 1.8 T Cupra R	209 ch	02.2002 >
	225 ch	07.2003 >
LEON (98-06) (1M1) - 1.9 TDI	130 ch	05.2003 >
	150 ch	02.2001 >
LEON (98-06) (1M1) - 2.8 Cupra 4	204 ch	02.2001 >
LEON (05-12) (1P1) - 1.6	102 ch	09.2005 >
TOLEDO (99-06) (1M2) - 1.9 TDI	130 ch	05.2003 > 05.2006
	150 ch	10.2000 > 05.2006
TOLEDO (04-09) (5P2) - 1.6	102 ch	10.2004 > 05.2009
<b>SKODA</b>		
OCTAVIA (96-10) Combi (1U5) - 1.9 TDI 4x4	100 ch	09.2000 >
OCTAVIA (04-13) (1Z3) - 1.6	102 ch	06.2004 >
<b>VOLKSWAGEN</b>		
BORA (1J2) - 1.9 TDI	115 ch	12.1998 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2000 > 05.2005
BORA (1J2) - 1.9 TDI 4motion	115 ch	02.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2000 > 05.2005
BORA Break (1J6) - 1.6 16V	105 ch	02.2000 > 05.2005
BORA Break (1J6) - 1.9 TDI	115 ch	05.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2001 > 05.2005
BORA Break (1J6) - 1.9 TDI 4motion	115 ch	05.1999 > 06.2001
	130 ch	11.2000 > 05.2005
	150 ch	05.2001 > 05.2005
CADDY (2004-) Break (2KB, 2KJ) - 1.6	102 ch	04.2004 >
CADDY (2004-) Camionnette (2KA, 2KH) - 1.6	102 ch	04.2004 >
GOLF (97-05) (1J1) - 1.9 TDI	115 ch	12.1998 > 06.2001
	130 ch	11.2000 > 06.2005
	150 ch	05.2000 > 06.2005
GOLF (97-05) (1J1) - 1.9 TDI 4motion	115 ch	09.1999 > 06.2001
	130 ch	11.2000 > 06.2005
	150 ch	02.2000 > 06.2005
GOLF (99-05) Break (1J5) - 1.9 TDI	115 ch	08.1999 > 06.2001
	130 ch	11.2000 >
GOLF (99-05) Break (1J5) - 1.9 TDI 4motion	115 ch	05.1999 > 06.2001
	130 ch	11.2000 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.