


## DONNEES TECHNIQUES

Length [mm]	<b>635</b>
Number of splines (wheels side)	<b>33</b>
Number of Teeth, ABS ring	<b>45</b>
	<b>for vehicles with ABS</b>
ABS Ring Ø [mm]	<b>81</b>
ABS ring type	<b>W</b>
(wheels side) CV Joint Ø [mm]	<b>90</b>
(gearbox side) CV Joint Ø [mm]	<b>108</b>
Number of mounting bores	<b>6</b>
Ø mounting holes [mm]	<b>10</b>

## PHOTOS

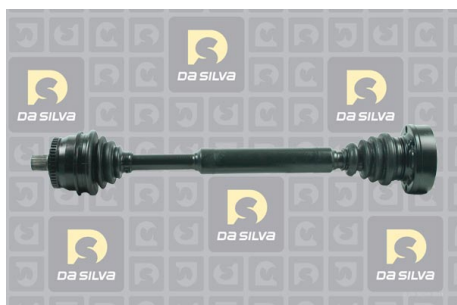


## DOCUMENTS

<b>BT-100</b>	<b>Conseils de montage des cardans</b>
<b>BT-104</b>	<b>Soufflets et Triaxes FIAT</b>
<b>BT-105</b>	<b>Soufflets et Triaxes SEAT</b>
<b>BT-131</b>	<b>Refus des carcasses transmissions</b>

## APPLICATIONS

<b>SKODA</b>		
SUPERB (01-08) (3U4) - 2.0	115 ch	02.2002 >
<b>VOLKSWAGEN</b>		
PASSAT (96-00) (3B2) - 1.8	115 ch	01.1997 > 11.2000
	125 ch	10.1996 > 11.2000
PASSAT (96-00) (3B2) - 1.8 Syncro/4motion	125 ch	10.1996 > 11.2000
PASSAT (96-00) (3B2) - 1.8 T	150 ch	10.1996 > 11.2000
PASSAT (96-00) Variant (3B5) - 1.8	115 ch	06.1997 > 11.2000
	125 ch	06.1997 > 11.2000
PASSAT (96-00) Variant (3B5) - 1.8 Syncro/4motion	125 ch	06.1997 > 11.2000
PASSAT (96-00) Variant (3B5) - 1.8 T	150 ch	06.1997 > 11.2000
PASSAT (00-05) (3B3) - 1.8 T 20V	150 ch	11.2000 > 05.2005
PASSAT (00-05) (3B3) - 2.0	115 ch	11.2000 > 05.2005
PASSAT (00-05) Variant (3B6) - 1.8 T 20V	150 ch	11.2000 > 05.2005
PASSAT (00-05) Variant (3B6) - 2.0	115 ch	11.2000 > 05.2005

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.