


DONNEES TECHNIQUES

Length [mm]	910
Number of splines (wheels side)	26
	for vehicles without ABS
(wheels side) shoulder Ø [mm]	55
(wheels side) CV Joint Ø [mm]	85
Number of splines (gearbox side)	25

PHOTOS

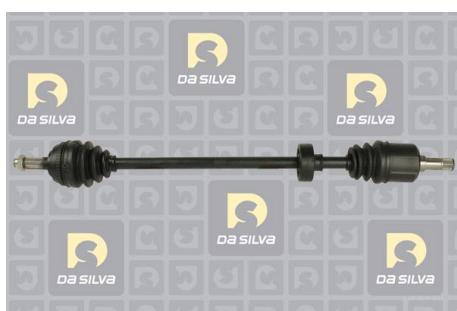

DOCUMENTS

- BT-100** **Conseils de montage des cardans**
- BT-104** **Soufflets et Triaxes FIAT**
- BT-105** **Soufflets et Triaxes SEAT**
- BT-131** **Refus des carcasses transmissions**

APPLICATIONS

HONDA

CIVIC (92-95) Coupe (EJ) - 1.5 i LSi (EJ2)	101 ch	01.1994 > 11.1995
CIVIC (92-95) Coupe (EJ) - 1.6 i (EJ6)	105 ch	01.1994 > 11.1995
CIVIC (92-95) Coupe (EJ) - 1.6 i Vtec (EJ1)	125 ch	01.1994 > 03.1996

⚠ Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.