


DONNEES TECHNIQUES

Length [mm]	521
Number of splines (wheels side)	36
	for vehicles without ABS
Shape of the joint (gearbox side)	Star-form
(wheels side) shoulder Ø [mm]	53
(wheels side) CV Joint Ø [mm]	98
(gearbox side) CV Joint Ø [mm]	86
Diam. ext. plate (A) [mm]	123
Number of mounting bores	6
Ø mounting holes [mm]	10

PHOTOS

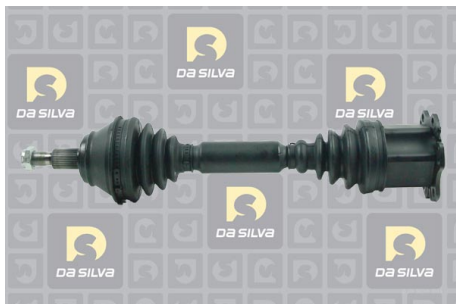


DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

AUDI		
A3 (96-03) (8L1) - 1.8 T	180 ch	12.1998 >
A3 (96-03) (8L1) - 1.8 T quattro	150 ch	12.1996 >
	180 ch	10.1998 >
A3 (96-03) (8L1) - 1.9 TDI	130 ch	08.2000 >
A3 (96-03) (8L1) - 1.9 TDI quattro	130 ch	08.2000 >
VOLKSWAGEN		
BORA (1J2) - 1.9 TDI	115 ch	12.1998 > 06.2001
	130 ch	11.2000 > 05.2005
GOLF (97-05) (1J1) - 1.9 TDI	130 ch	11.2000 > 06.2005

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.