


DONNEES TECHNIQUES

Length [mm]	913
Number of splines (wheels side)	25
for vehicles without ABS	
(wheels side) shoulder Ø [mm]	55
(wheels side) CV Joint Ø [mm]	90
Number of splines (gearbox side)	24
(gearbox side) CV Joint Ø [mm]	85

PHOTOS

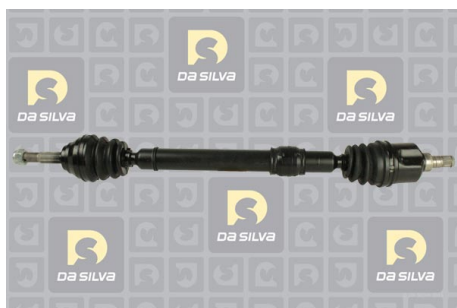

DOCUMENTS

BT-100	Conseils de montage des cardans
BT-104	Soufflets et Triaxes FIAT
BT-105	Soufflets et Triaxes SEAT
BT-131	Refus des carcasses transmissions

APPLICATIONS

NISSAN		
SUNNY (90-95) (N14) - 1.4 i	75 ch	08.1993 > 05.1995
SUNNY (90-95) (N14) - 1.4 i 16V	87 ch	08.1993 > 06.1995
SUNNY (90-95) Liftback (N14) - 1.4 i	75 ch	08.1993 > 05.1995
SUNNY (90-95) Liftback (N14) - 1.4 i 16V	87 ch	08.1993 > 06.1995

⚠ Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.