


DONNEES TECHNIQUES

Length [mm]	915
Number of splines (wheels side)	26
Number of Teeth, ABS ring	48
	for vehicles with ABS
(wheels side) shoulder Ø [mm]	56
ABS ring type	R
(wheels side) CV Joint Ø [mm]	87
Number of splines (gearbox side)	20
(gearbox side) CV Joint Ø [mm]	85

PHOTOS

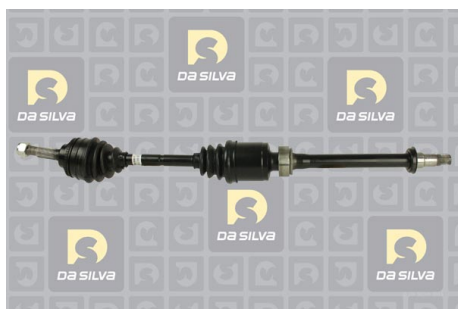


DOCUMENTS

- | | |
|---------------|--|
| BT-100 | Conseils de montage des cardans |
| BT-104 | Soufflets et Triaxes FIAT |
| BT-105 | Soufflets et Triaxes SEAT |
| BT-131 | Refus des carcasses transmissions |

APPLICATIONS

TOYOTA		
CARINA (88-92) 3/5 portes (_T17_) - 2.0 GLI (ST171)	121 ch	12.1987 > 03.1992
CARINA (88-92) 3 volumes (_T17_) - 2.0 GLI (ST171)	121 ch	12.1987 > 03.1992
CARINA (88-82) Station Wagon (_T17_) - 2.0	121 ch	12.1987 > 04.1992
CELICA (85-89) 3/5 portes (T16) - 2.0 GT	140 ch	09.1985 > 08.1989
	150 ch	08.1985 > 08.1989
CELICA (85-89) 3 volumes (ST16_) - 2.0	150 ch	01.1987 > 08.1990
CELICA (85-90) Cabriolet (_T16_) - 2.0 GT (ST162)	140 ch	10.1986 > 08.1990
	150 ch	10.1986 > 08.1990
CELICA (85-90) Coupe (T16F) - 2.0 Turbo 4x4	185 ch	03.1988 > 08.1990
CELICA (90-93) Coupe (_T18_) - 2.0 Turbo 4WD (ST185)	204 ch	10.1989 > 01.1994
	208 ch	10.1989 > 01.1994

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.