


DONNEES TECHNIQUES

Vehicle Main Current	for vehicles with 12V main current
Rated Power [kW]	2
Number of Teeth	12T
Rotation Direction	Clockwise rotation
Number of mounting bores	2
Plug Type ID	SOL66

PHOTOS

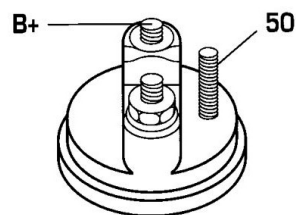

DOCUMENTS

BT-130 Refus des carcasses alternateurs/démarrEURS

APPLICATIONS
CITROËN

JUMPER (2006-) Bus (250) - 2.2 HDi 100	101 ch	04.2006 >
JUMPER (2006-) Bus (250) - 2.2 HDi 120	120 ch	04.2006 >
JUMPER (2006-) Camionnette (250) - 2.2 HDi 100	101 ch	04.2006 >
JUMPER (2006-) Camionnette (250) - 2.2 HDi 120	120 ch	04.2006 >
JUMPER (2006-) Plateau (250) - 2.2 HDi 100	101 ch	04.2006 >
JUMPER (2006-) Plateau (250) - 2.2 HDi 120	120 ch	04.2006 >


FIAT

DUCATO (2006-) Bus (250) - 100 Multijet 2.2 D	100 ch	07.2006 >
DUCATO (2006-) Camionnette (250) - 100 Multijet 2.2 D	100 ch	07.2006 >
DUCATO (2006-) Plateau (250) - 100 Multijet 2.2 D	100 ch	07.2006 >

FORD

TRANSIT (06-12) Bus - 2.2 TDCi	85 ch	07.2006 >
	110 ch	07.2006 >
	115 ch	10.2008 >
	130 ch	07.2006 >
	140 ch	10.2007 >
TRANSIT (06-12) Bus - 2.4 TDCi	100 ch	07.2006 >
	115 ch	07.2006 >
	140 ch	07.2006 >
TRANSIT (06-12) Bus - 2.4 TDCi Allroad	140 ch	11.2006 >
TRANSIT (06-12) Bus - 3.2 TDCi	200 ch	02.2008 >
TRANSIT (06-12) Camionnette - 2.2 TDCi	85 ch	07.2006 >
	110 ch	07.2006 >
	115 ch	10.2008 >
	130 ch	07.2006 >
	140 ch	10.2007 >
TRANSIT (06-12) Camionnette - 2.4 TDCi	100 ch	07.2006 >
	115 ch	07.2006 >
	140 ch	07.2006 >
TRANSIT (06-12) Camionnette - 2.4 TDCi Allroad	140 ch	11.2006 >
TRANSIT (06-12) Camionnette - 3.2 TDCi	200 ch	09.2007 >
TRANSIT (06-12) Plateau - 2.2 TDCi	85 ch	07.2006 >
	110 ch	07.2006 >
	115 ch	10.2008 >
	130 ch	07.2006 >
	140 ch	10.2007 >
TRANSIT (06-12) Plateau - 2.4 TDCi	100 ch	07.2006 >
	115 ch	07.2006 >
	140 ch	07.2006 >
TRANSIT (06-12) Plateau - 2.4 TDCi Allroad	140 ch	11.2006 >
TRANSIT (06-12) Plateau - 3.2 TDCi	200 ch	09.2007 >
TRANSIT TOURNEO - 2.2 TDCi	110 ch	07.2006 >
	115 ch	10.2008 >
	131 ch	07.2006 >
	140 ch	10.2007 >

PEUGEOT		
BOXER (2006-) Bus - 2.2 HDi 100	101 ch	04.2006 >
BOXER (2006-) Bus - 2.2 HDi 120	120 ch	04.2006 >
BOXER (2006-) Camionnette - 2.2 HDi 100	101 ch	04.2006 >
BOXER (2006-) Camionnette - 2.2 HDi 120	120 ch	04.2006 >
BOXER (2006-) plateau - 2.2 HDi 100	101 ch	04.2006 >
BOXER (2006-) plateau - 2.2 HDi 120	120 ch	04.2006 >

 Avant montage, comparez la pièce reçue à celle d'origine afin de vérifier que la bonne pièce a été choisie et peut être montée sur le véhicule. Le non-respect de cette consigne ou des instructions de montage annule la garantie.